

تهویه سبلان




www.tahviehsabalan.com

منحنی های مشخصه اگزاست فن های فوروارد




200 mm WHEEL DIAMETER

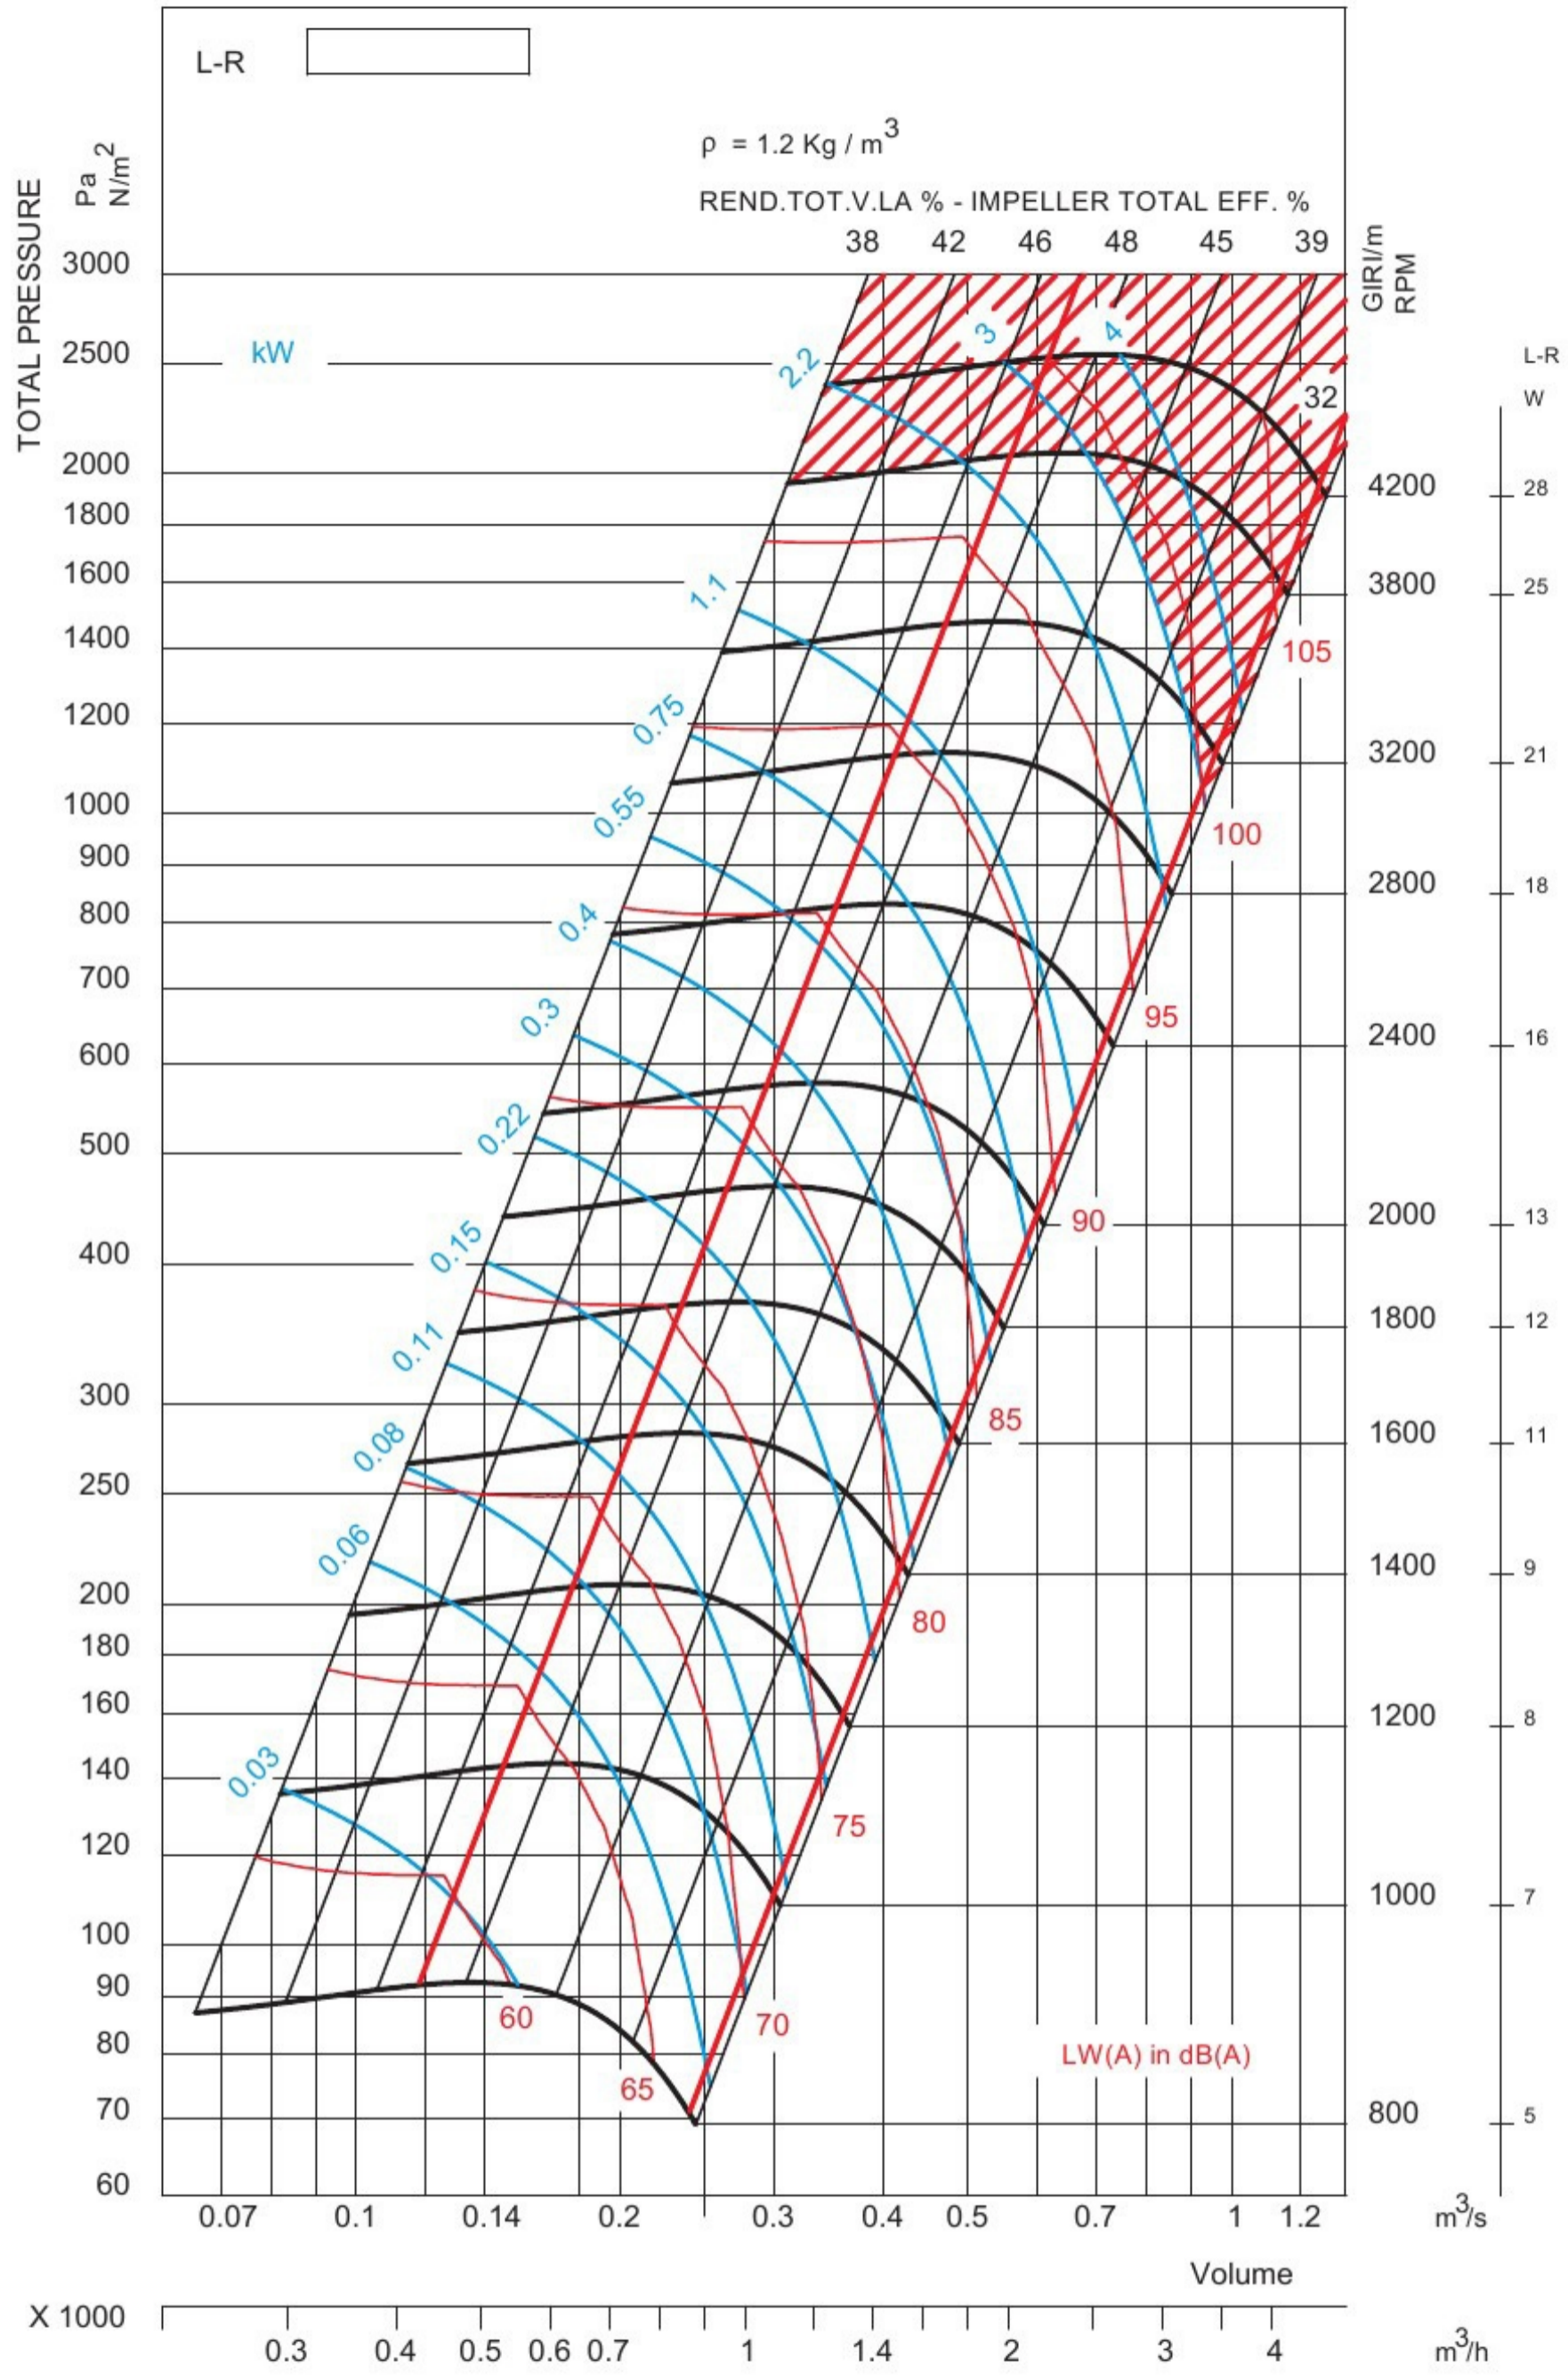




225 mm

WHEEL DIAMETER

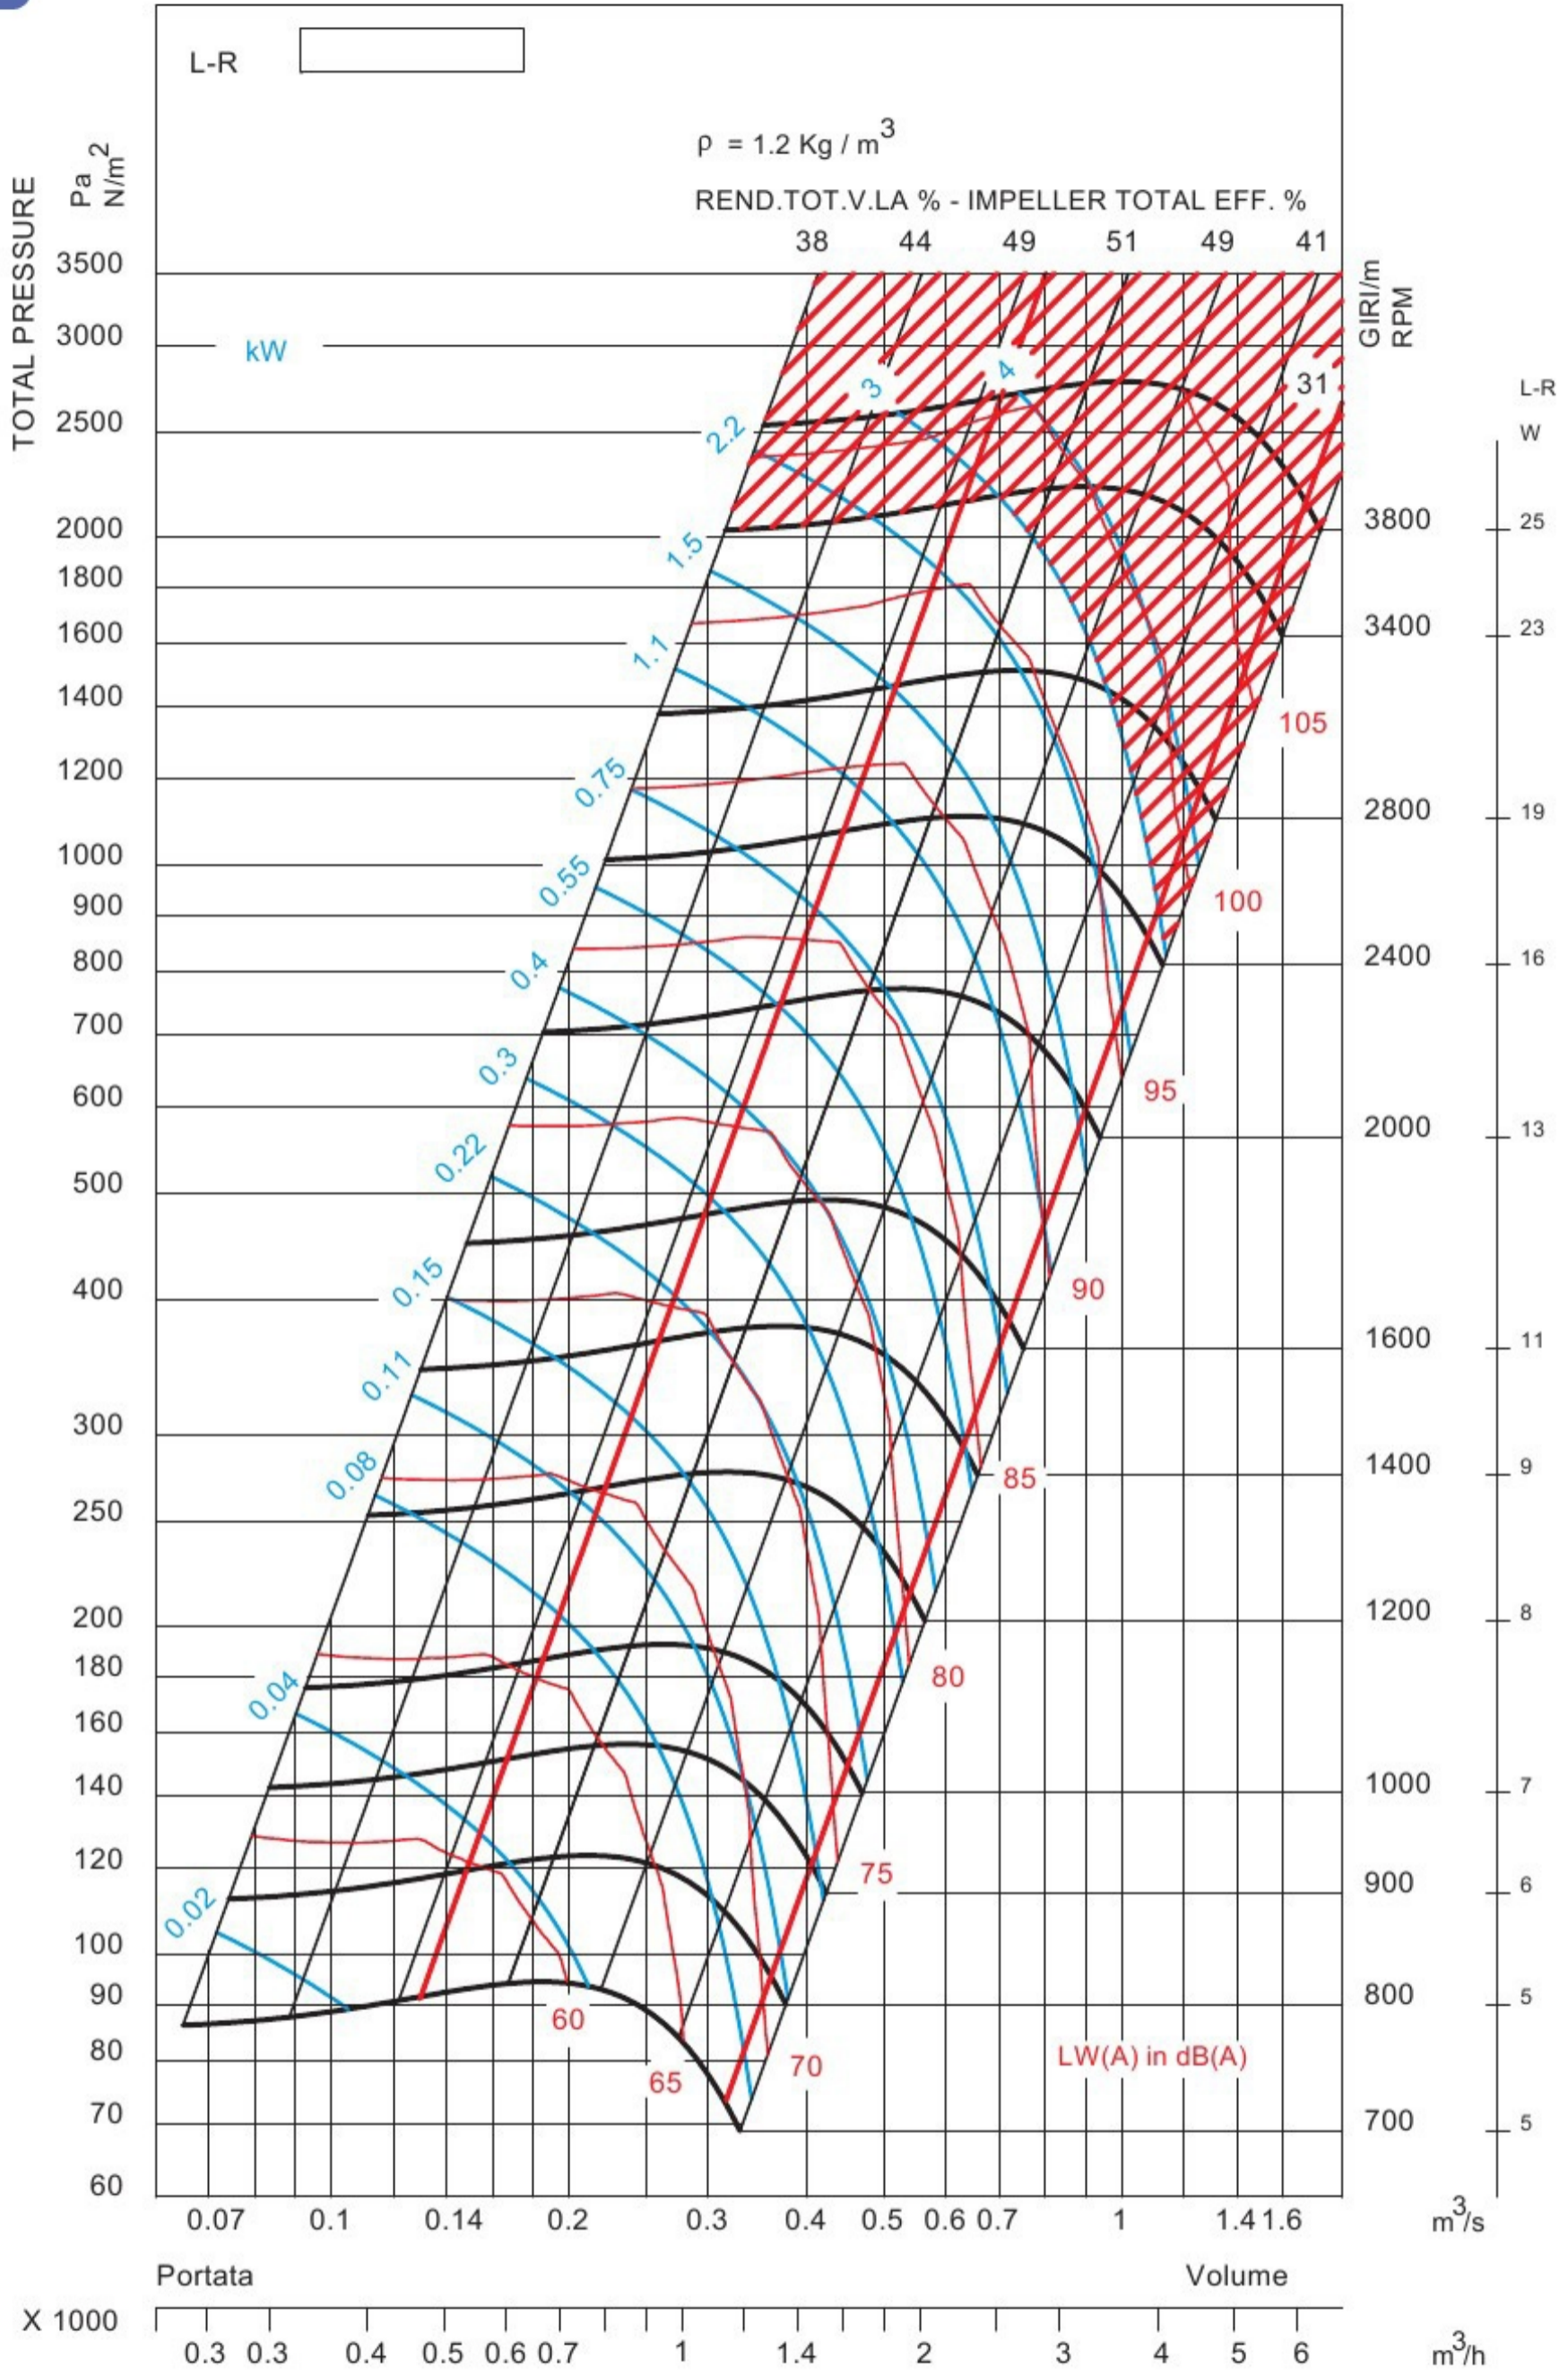

250 mm


WHEEL DIAMETER

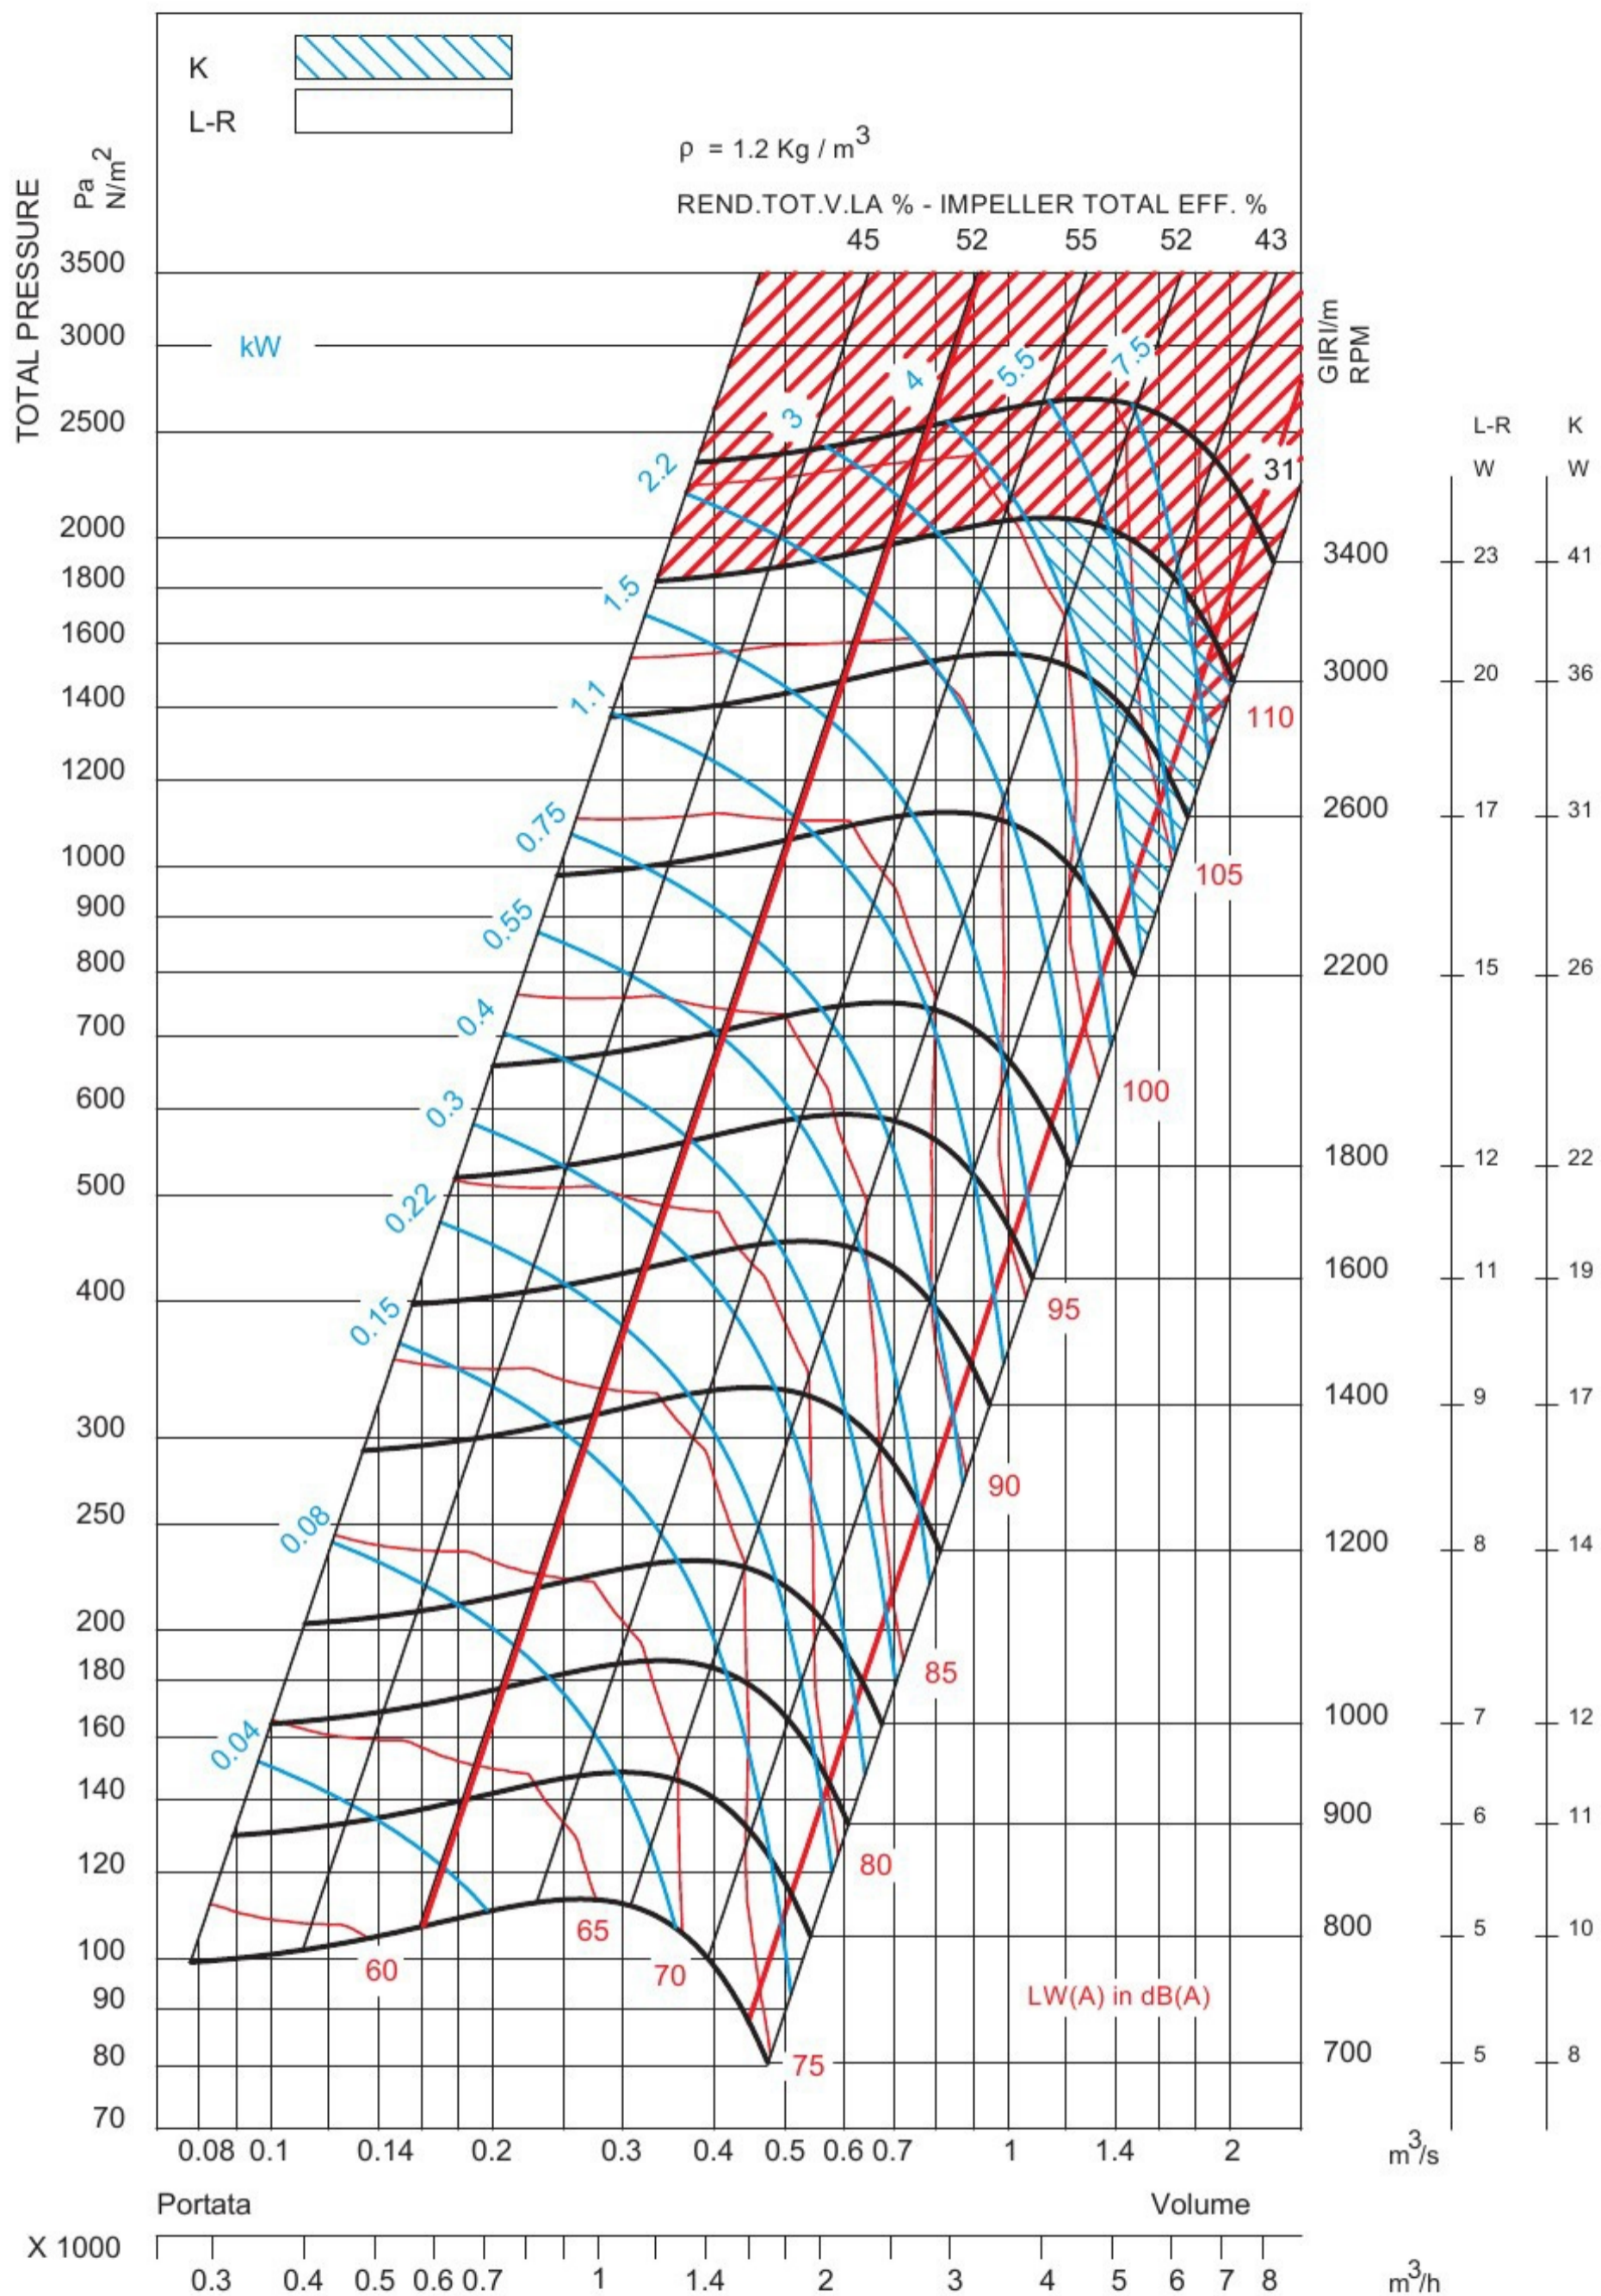



280 mm


WHEEL DIAMETER

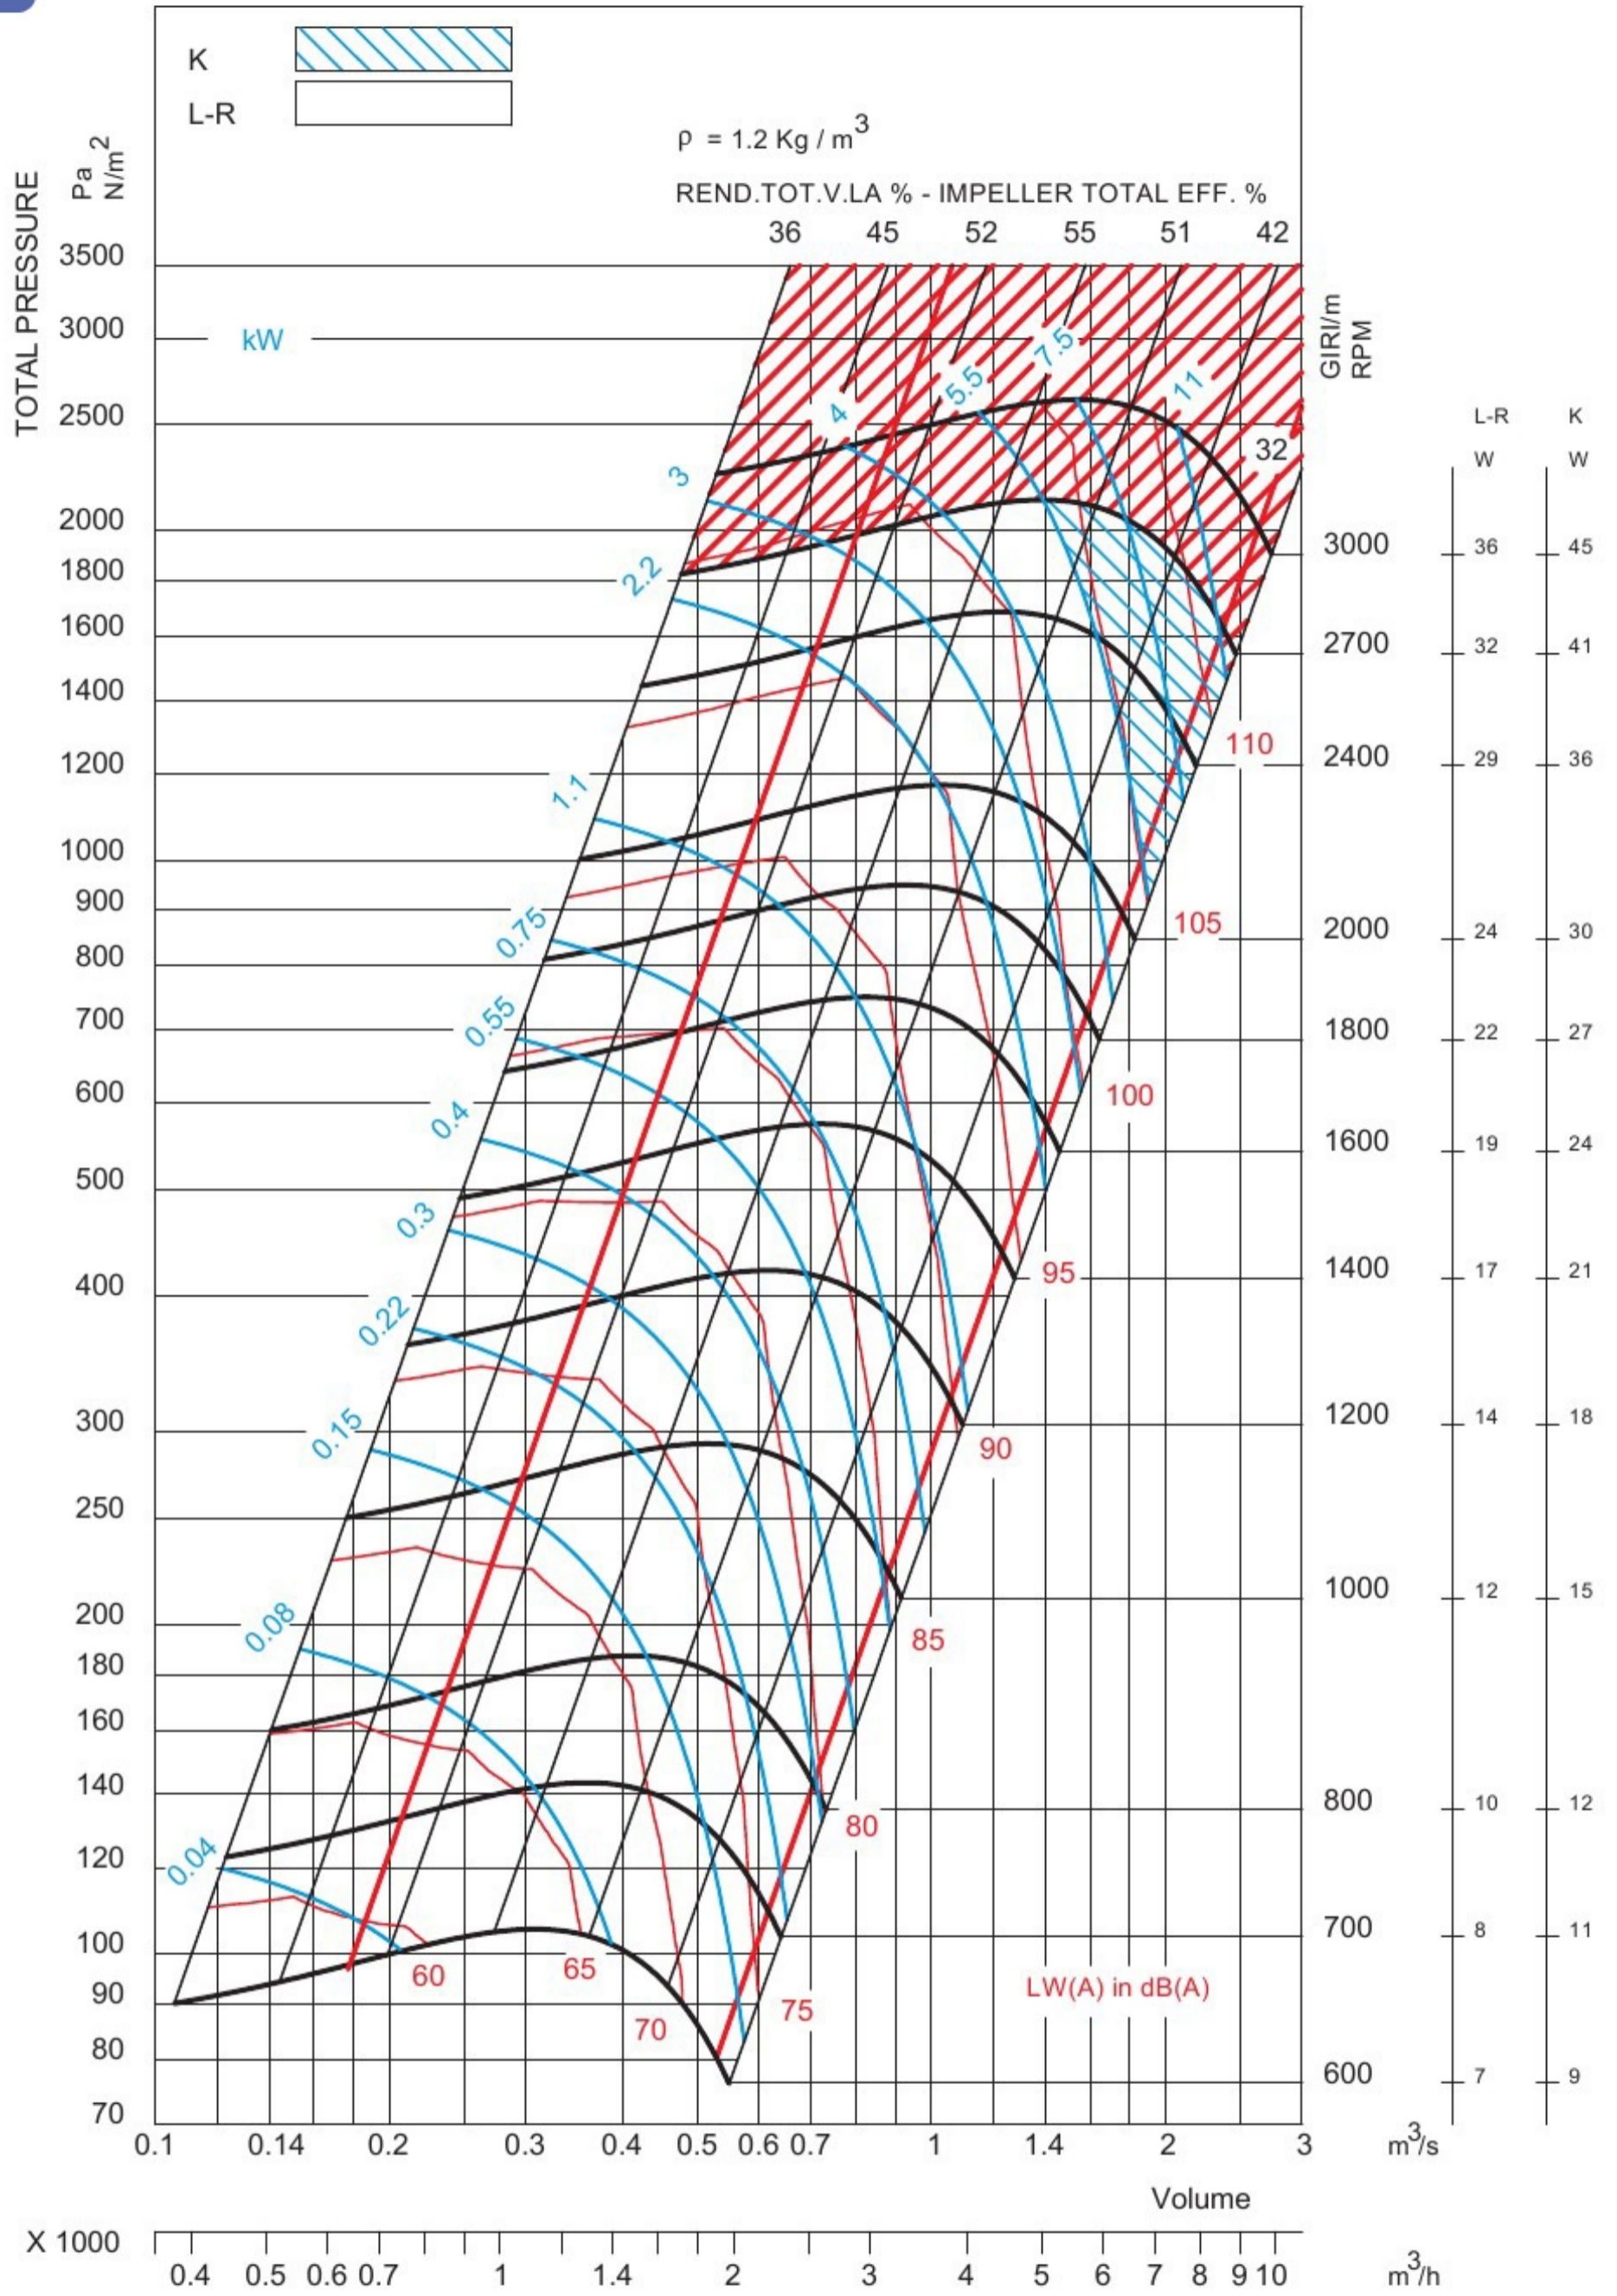




315 mm

WHEEL DIAMETER

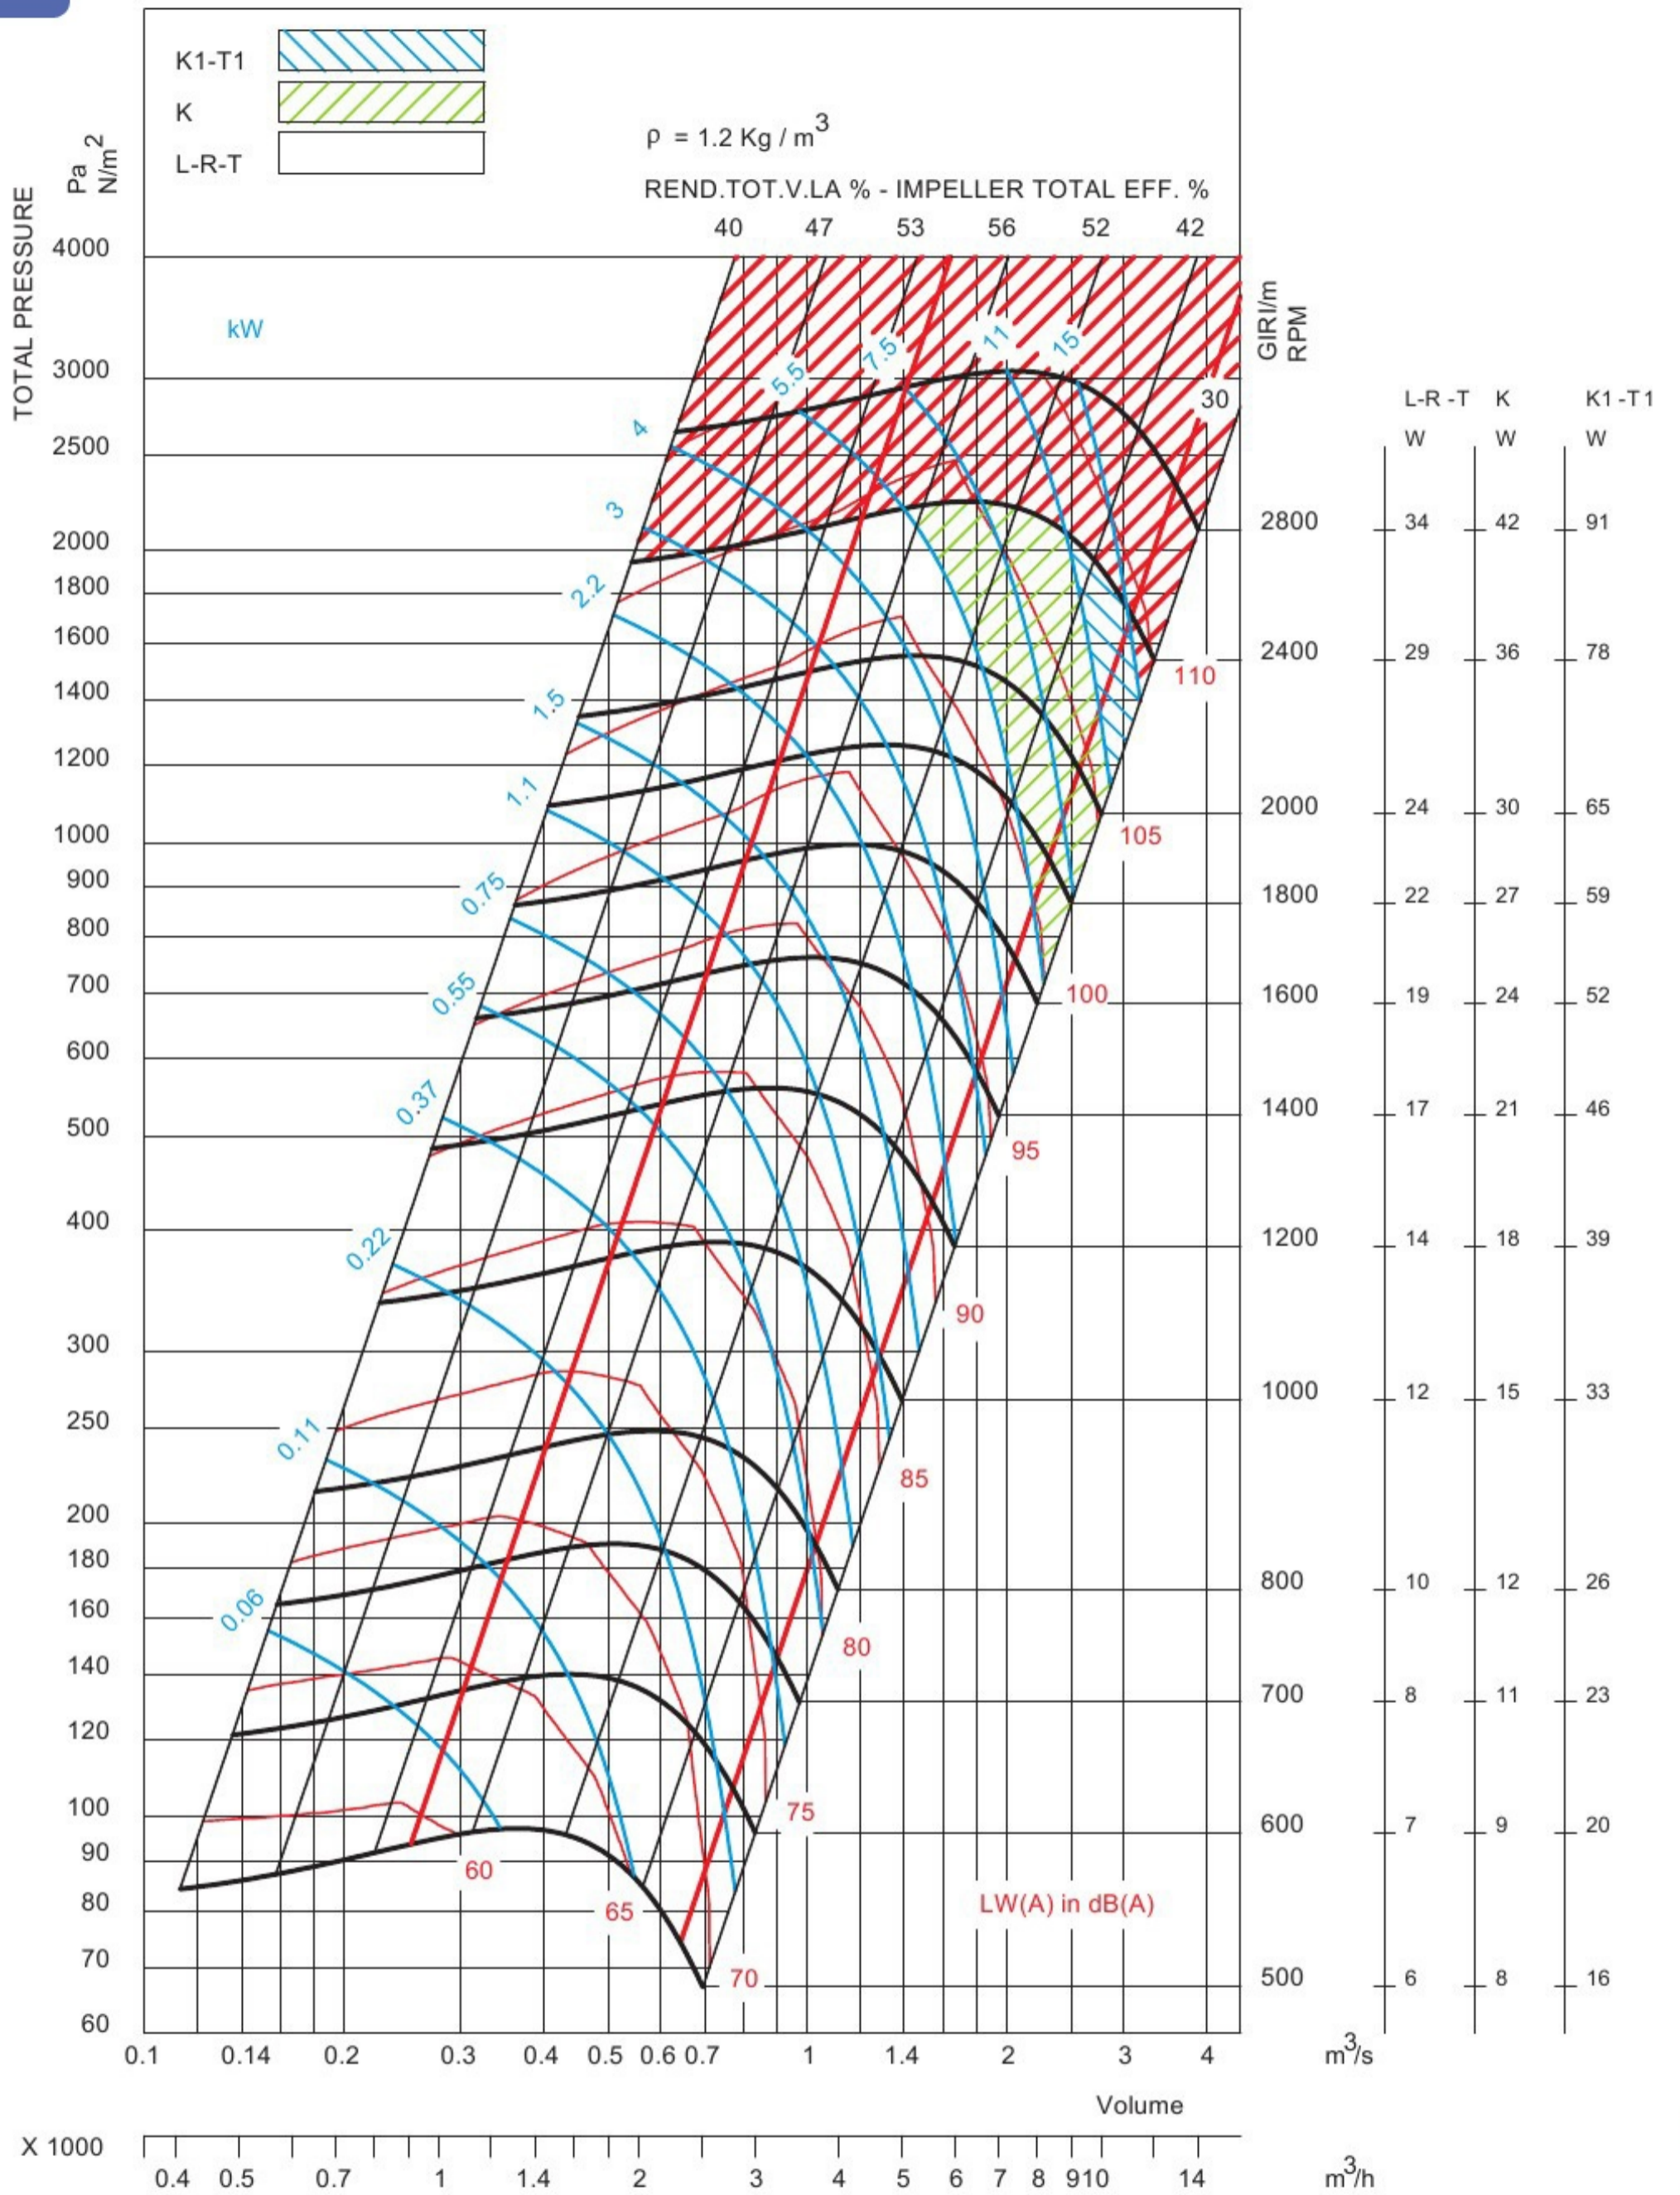




355 mm WHEEL DIAMETER

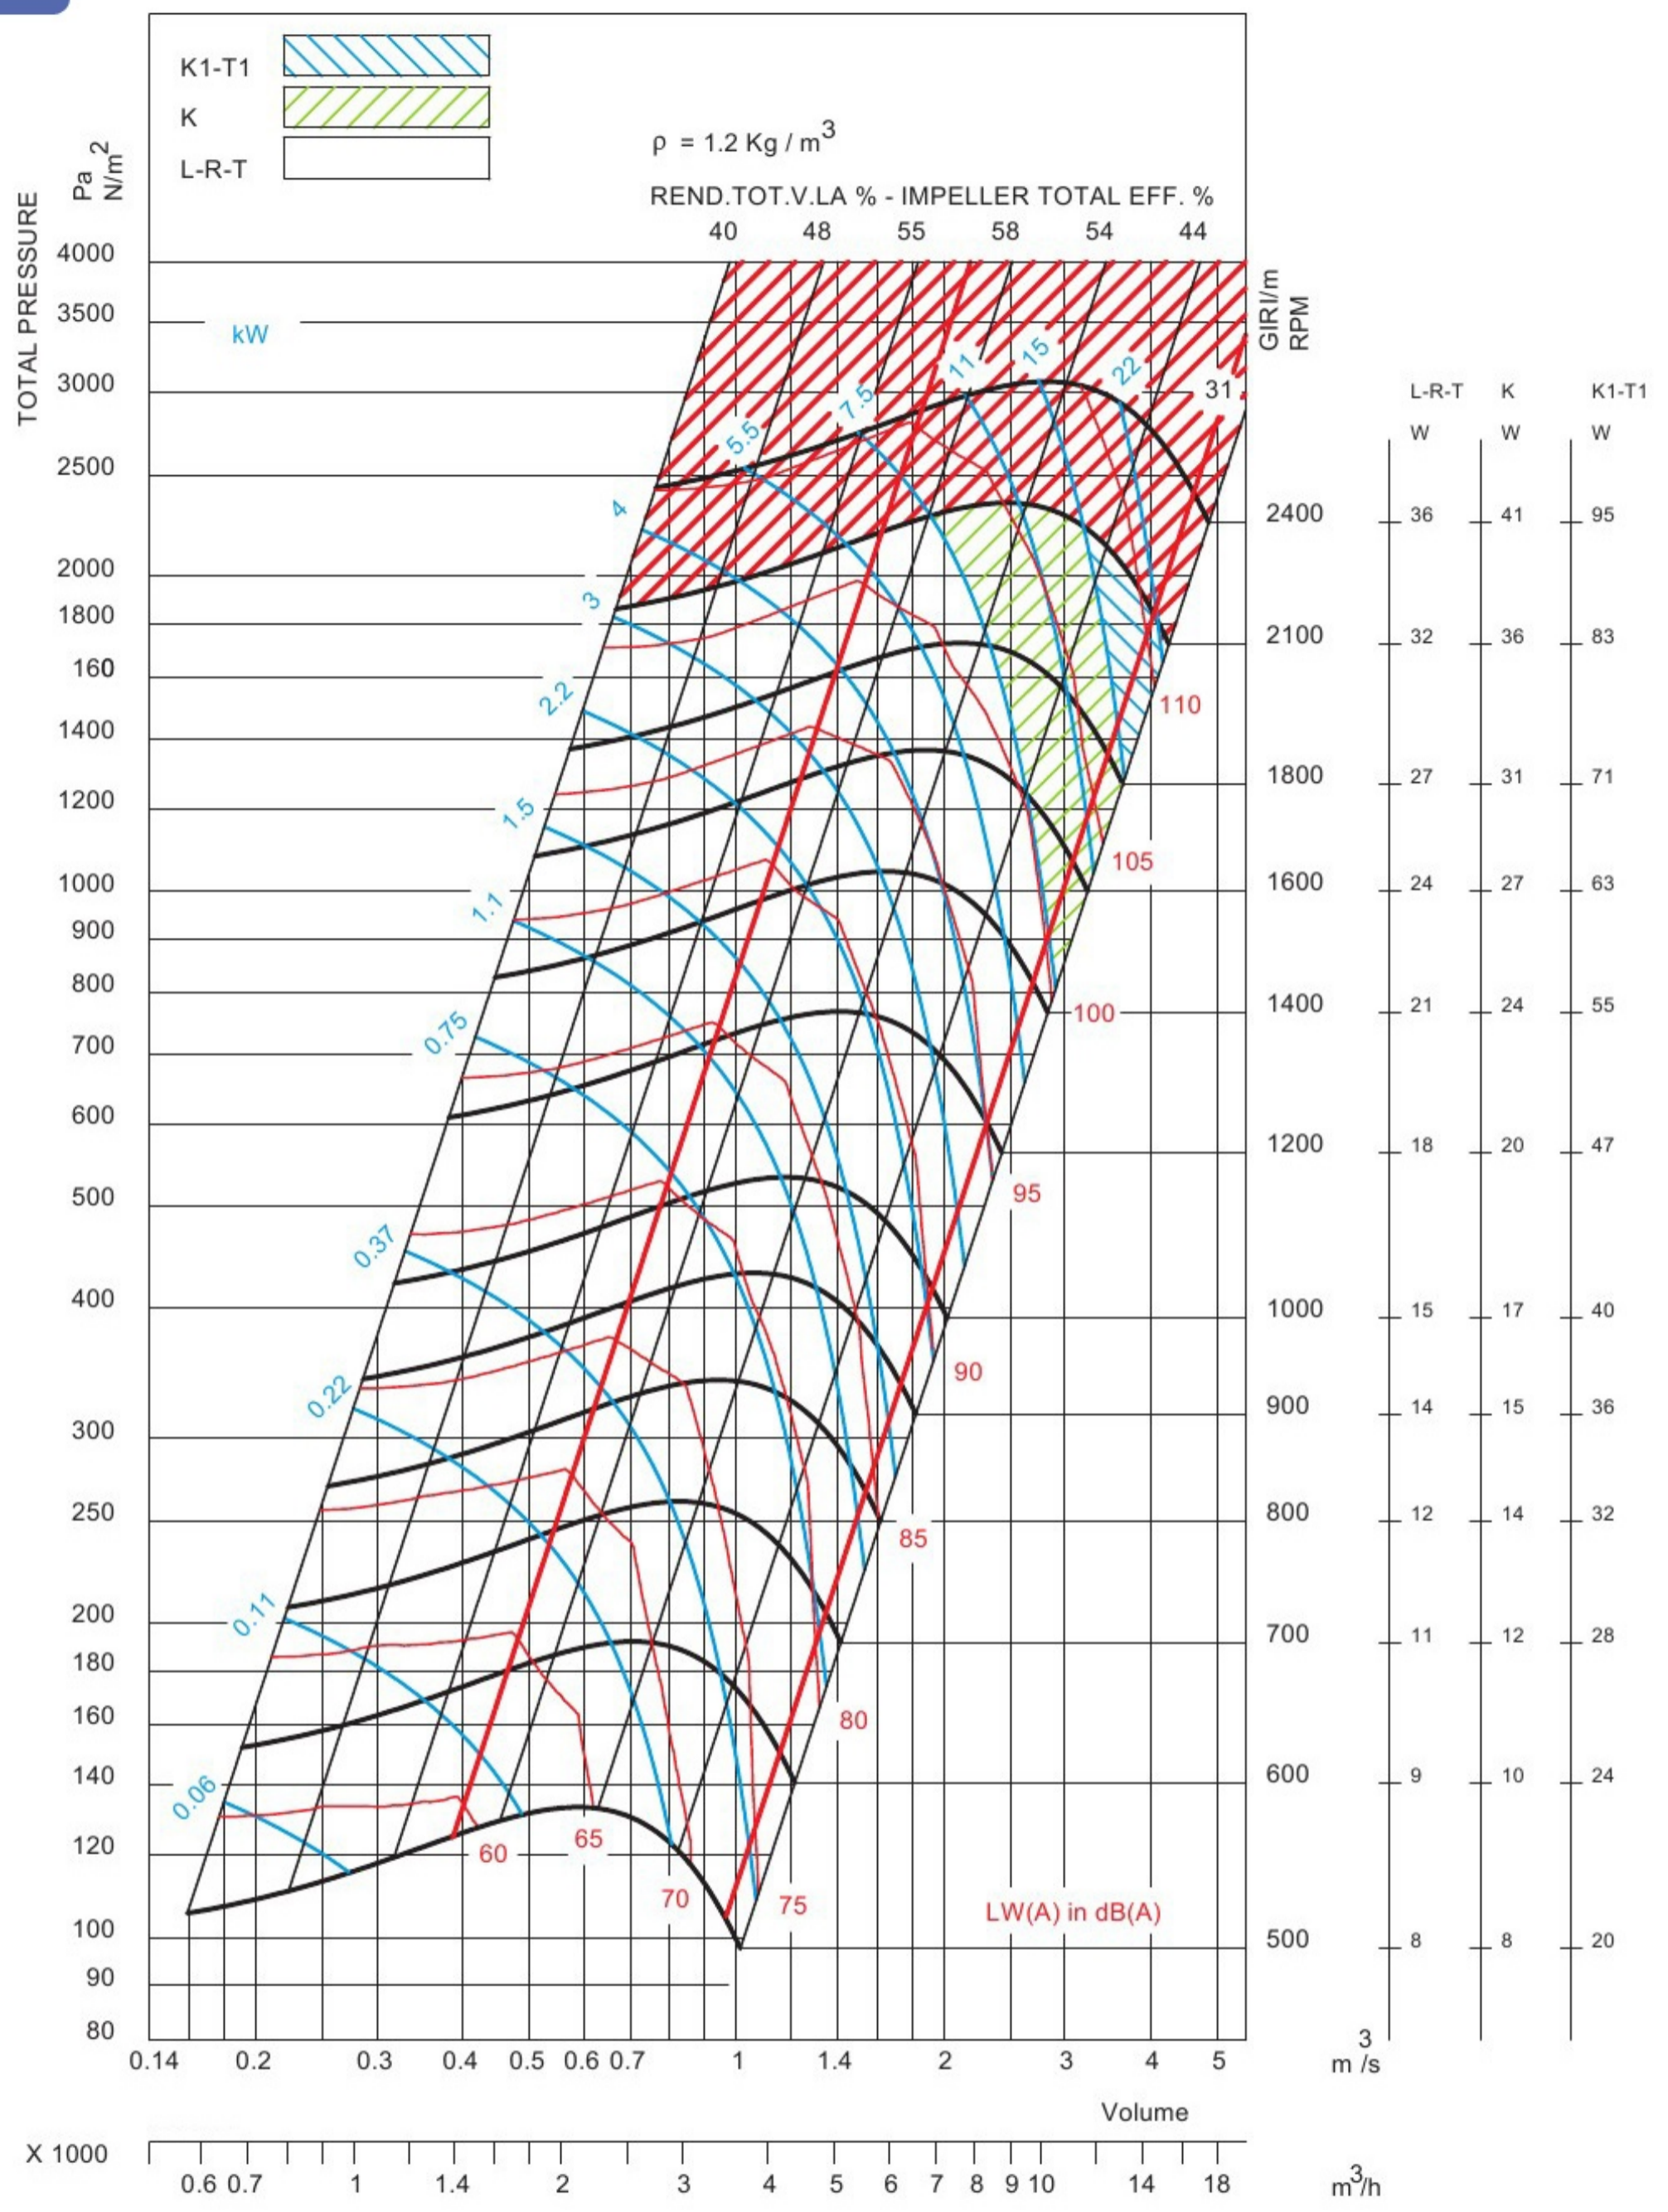




400 mm WHEEL DIAMETER

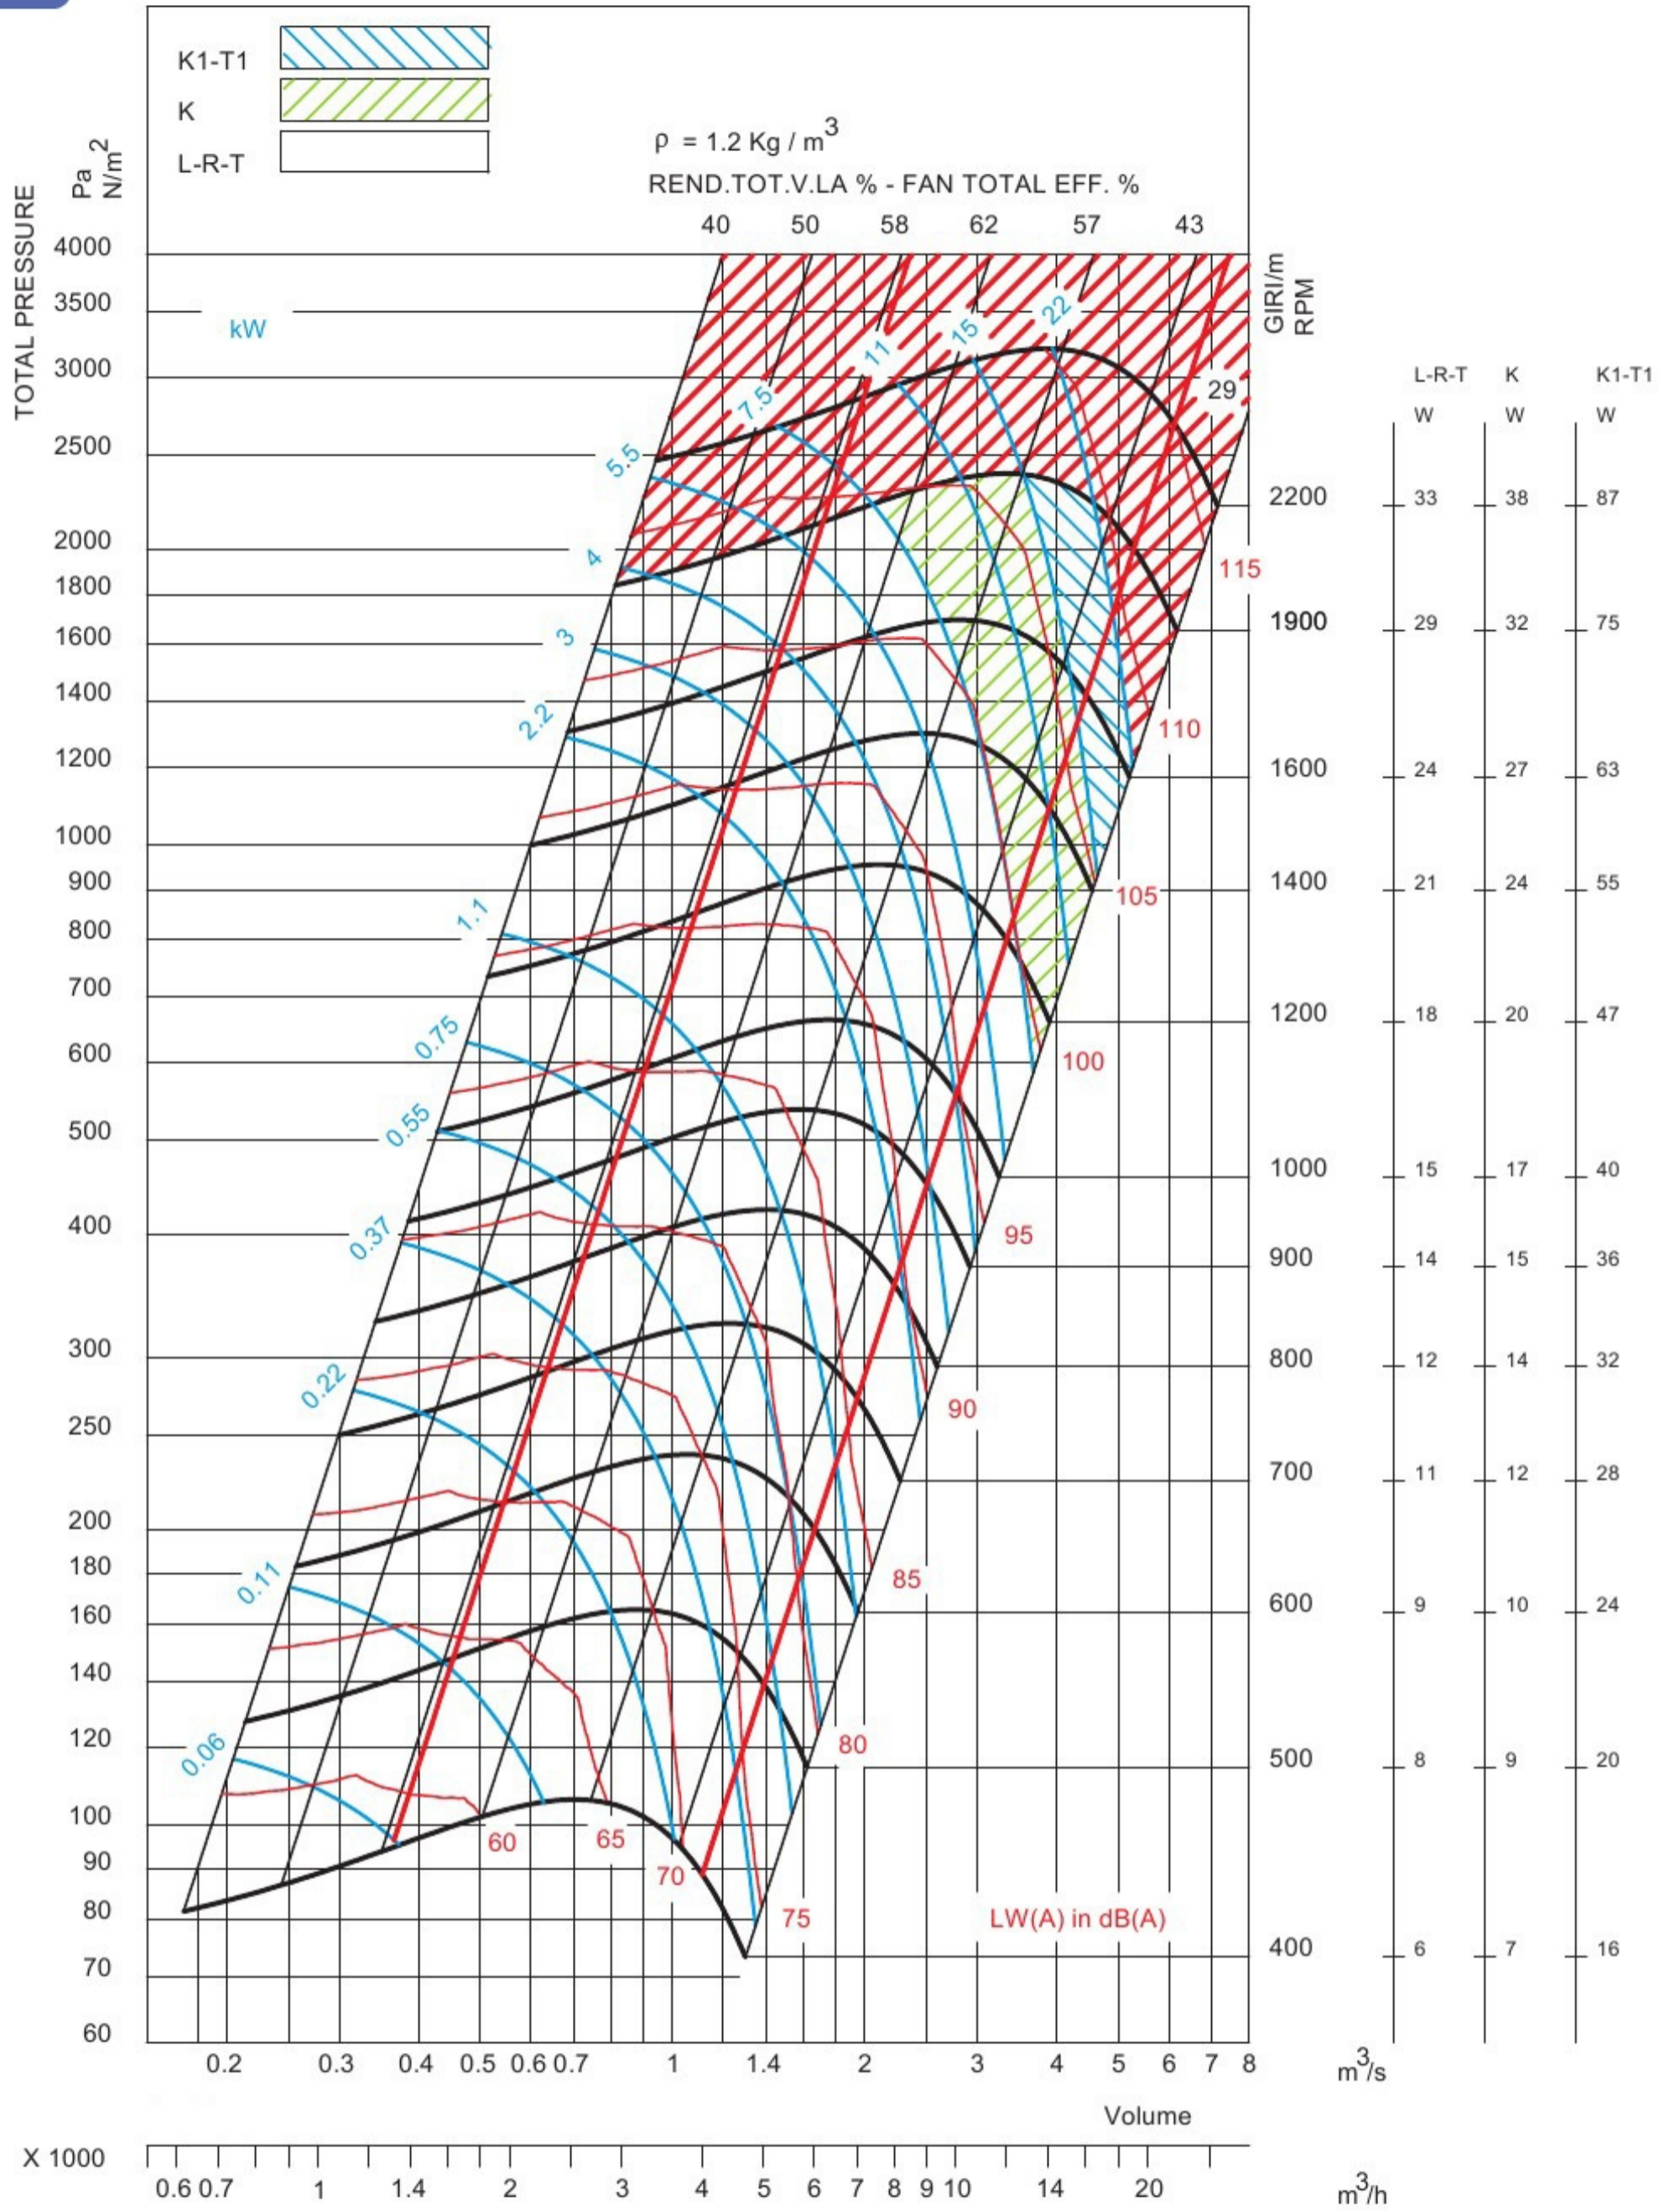




450 mm

WHEEL DIAMETER

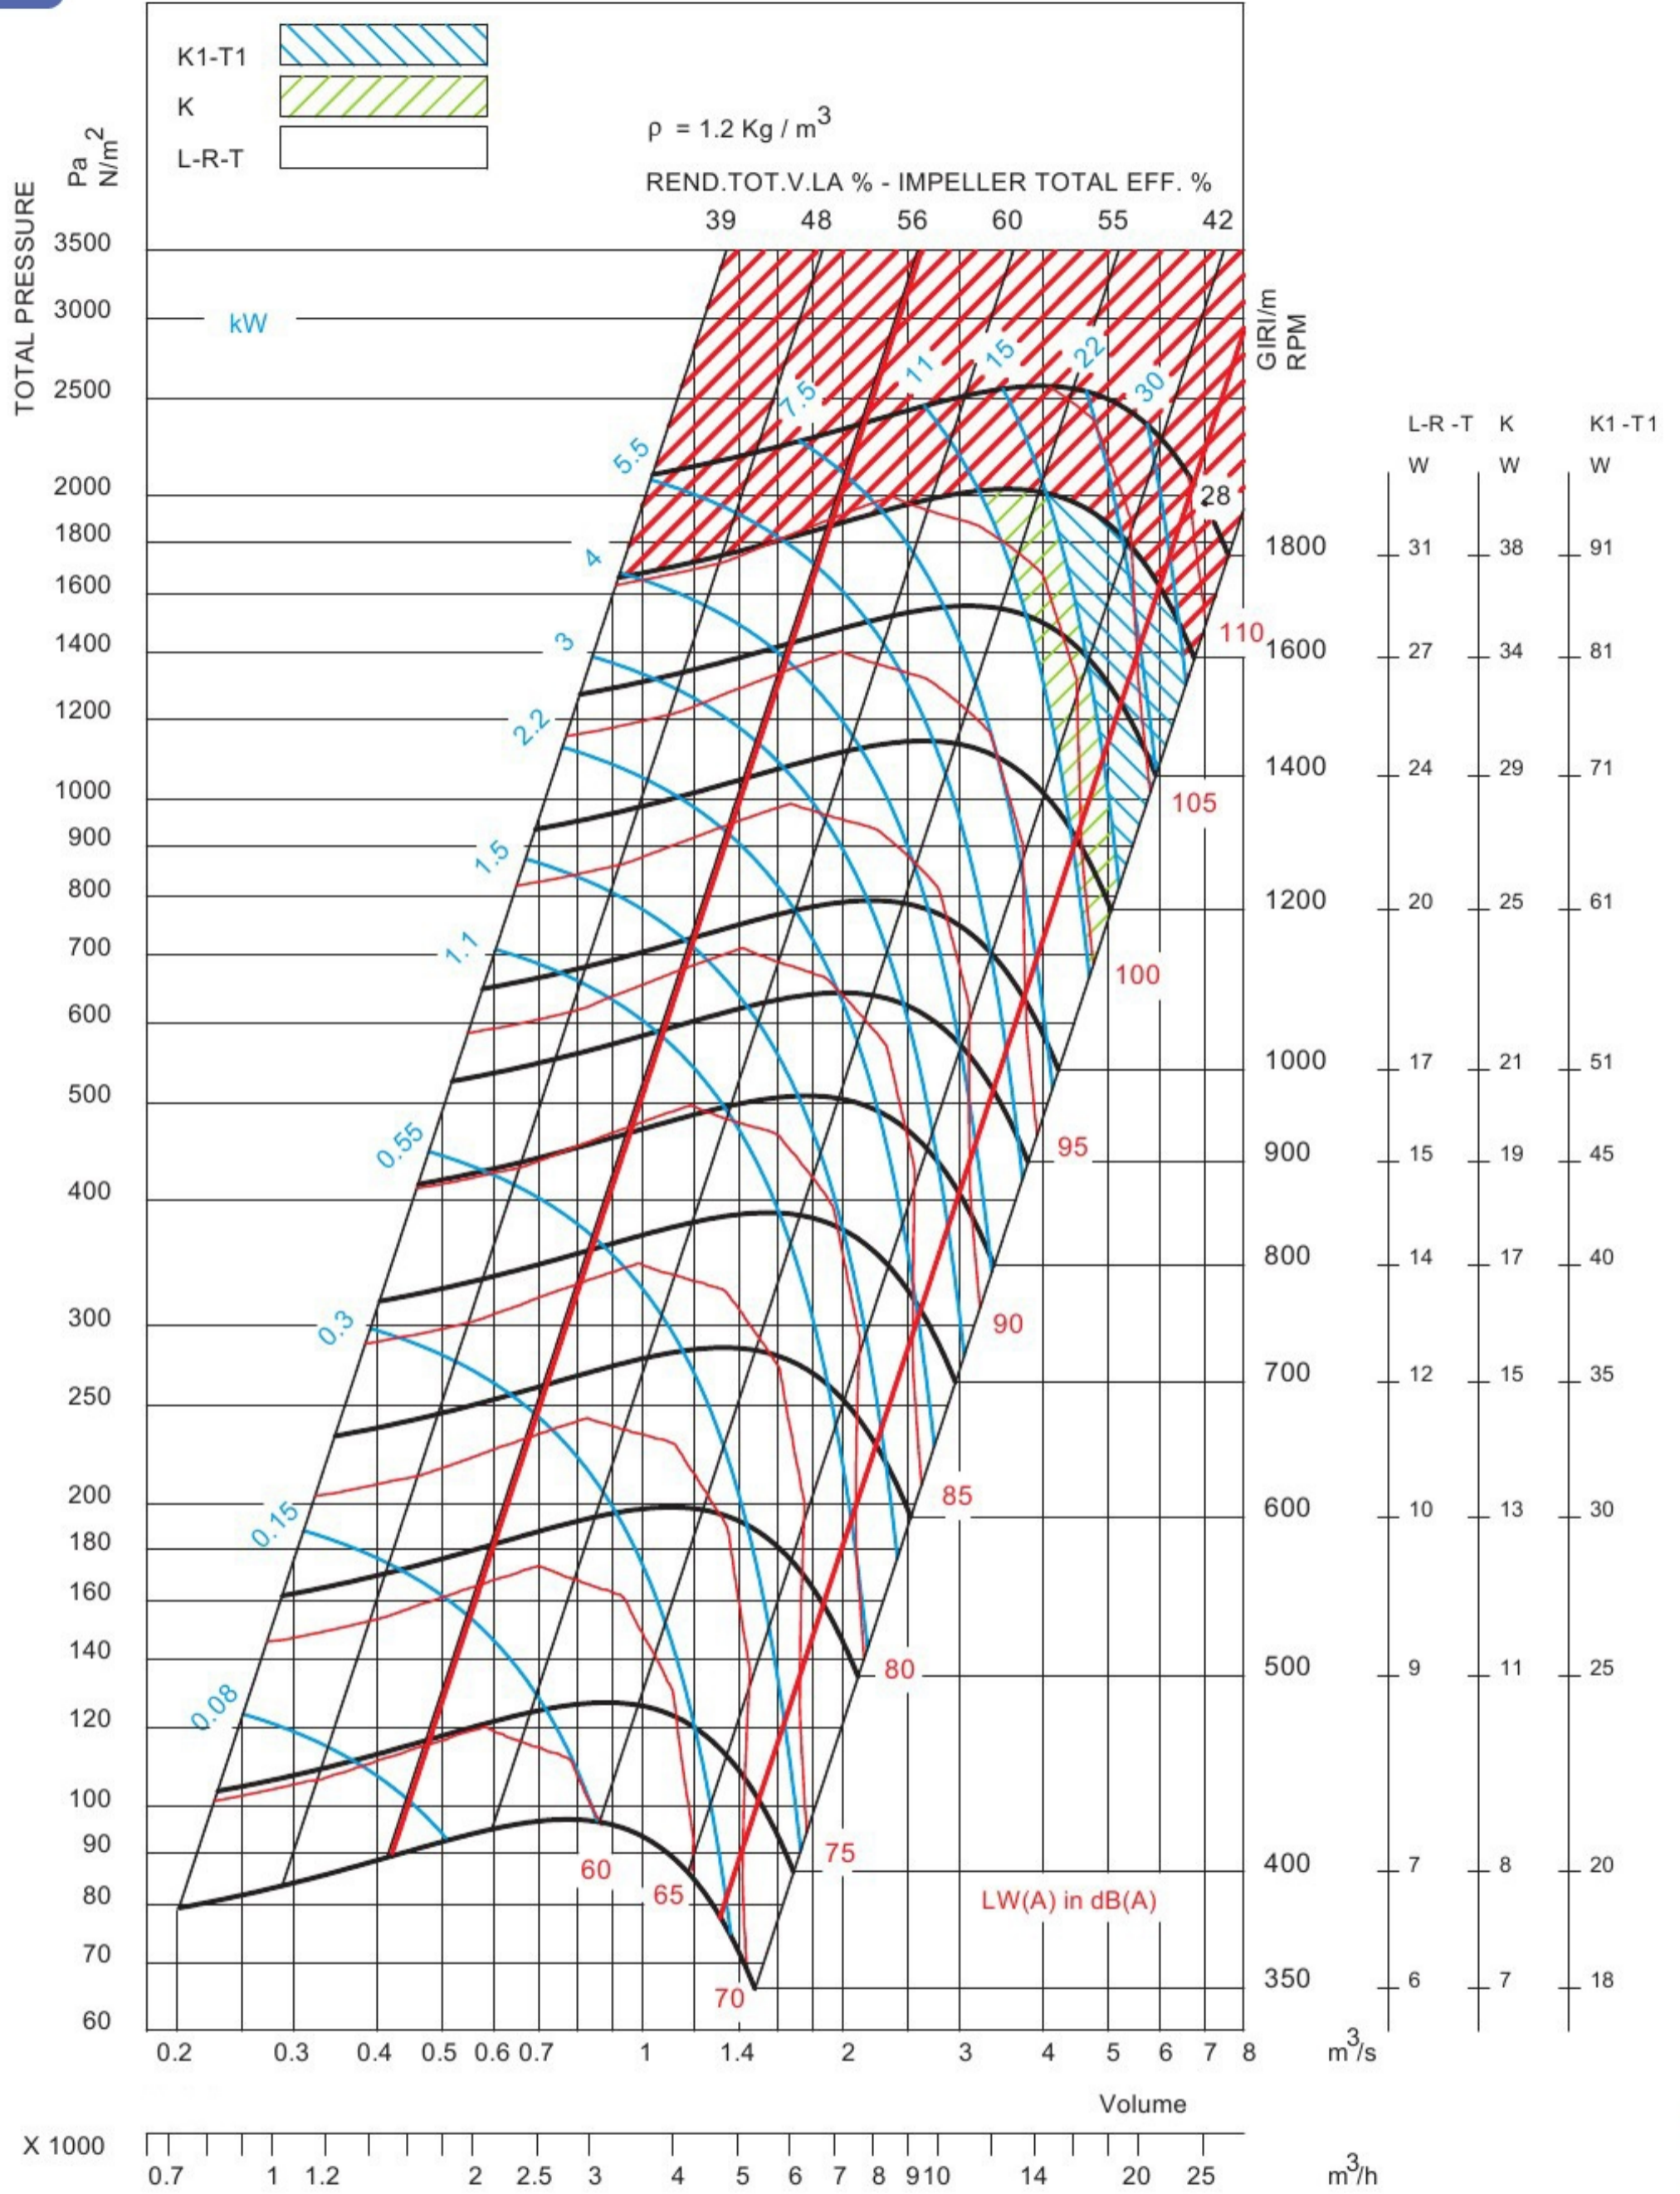




500 mm WHEEL DIAMETER

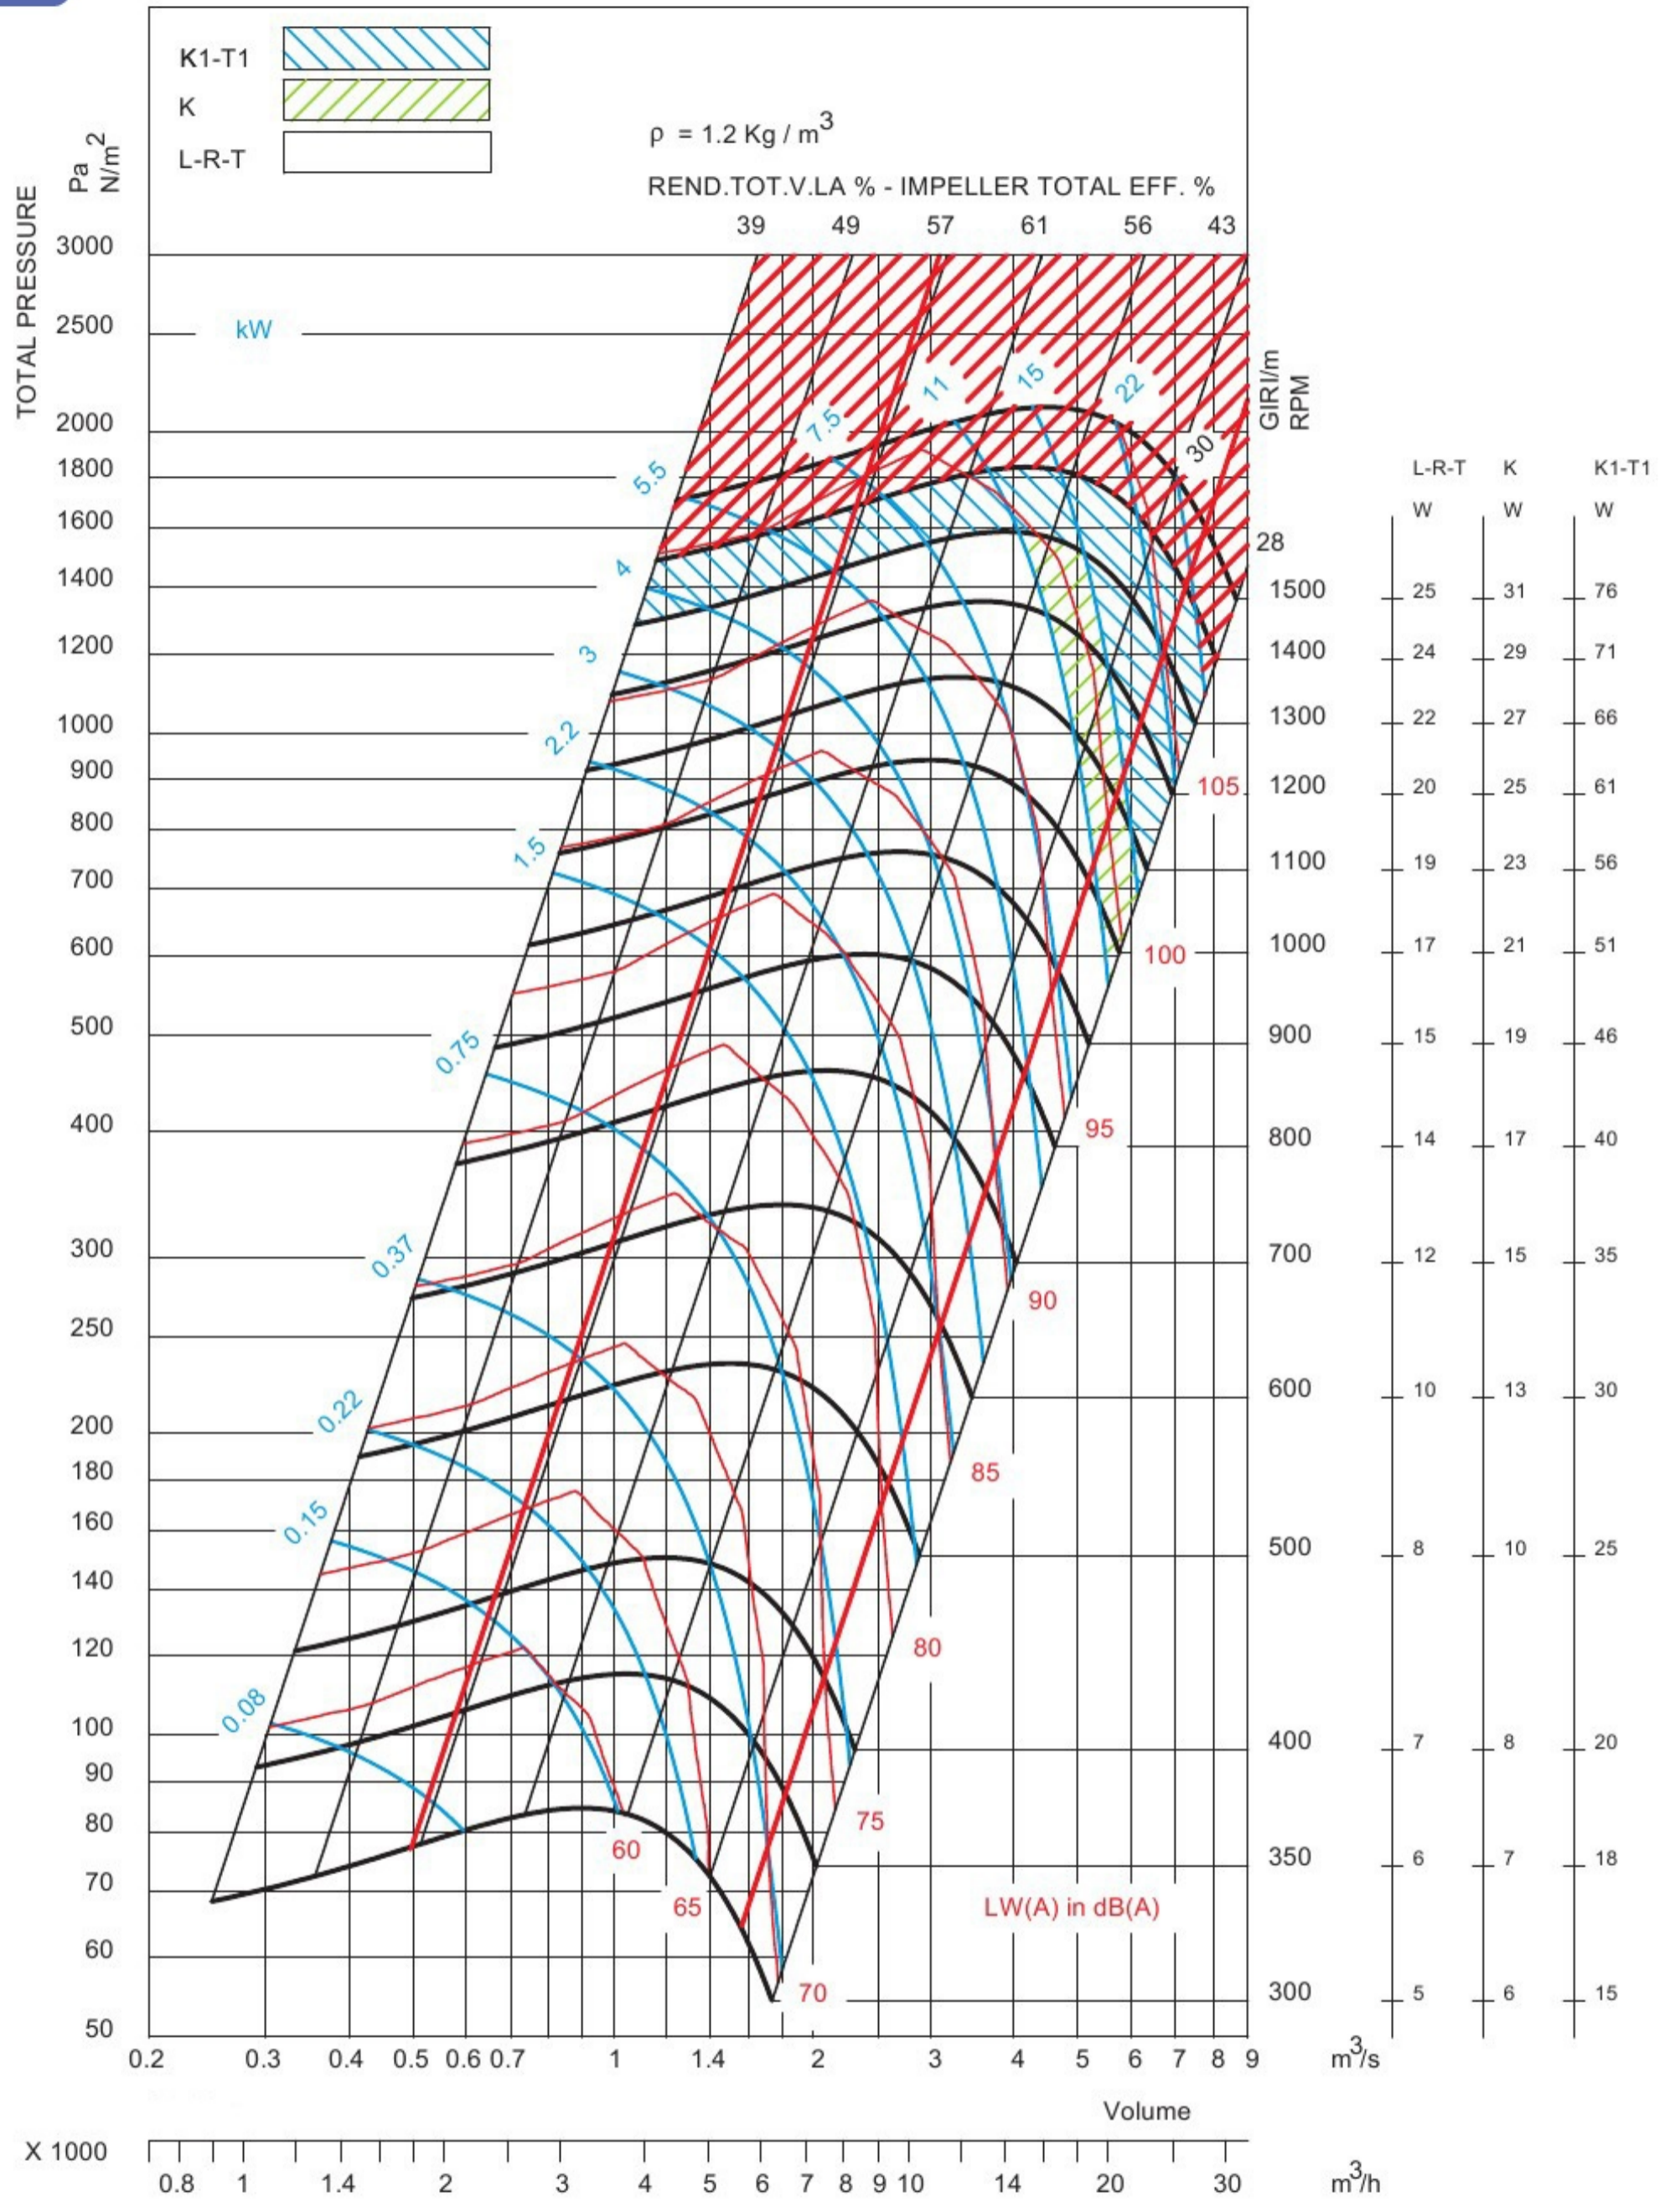




560 mm

WHEEL DIAMETER

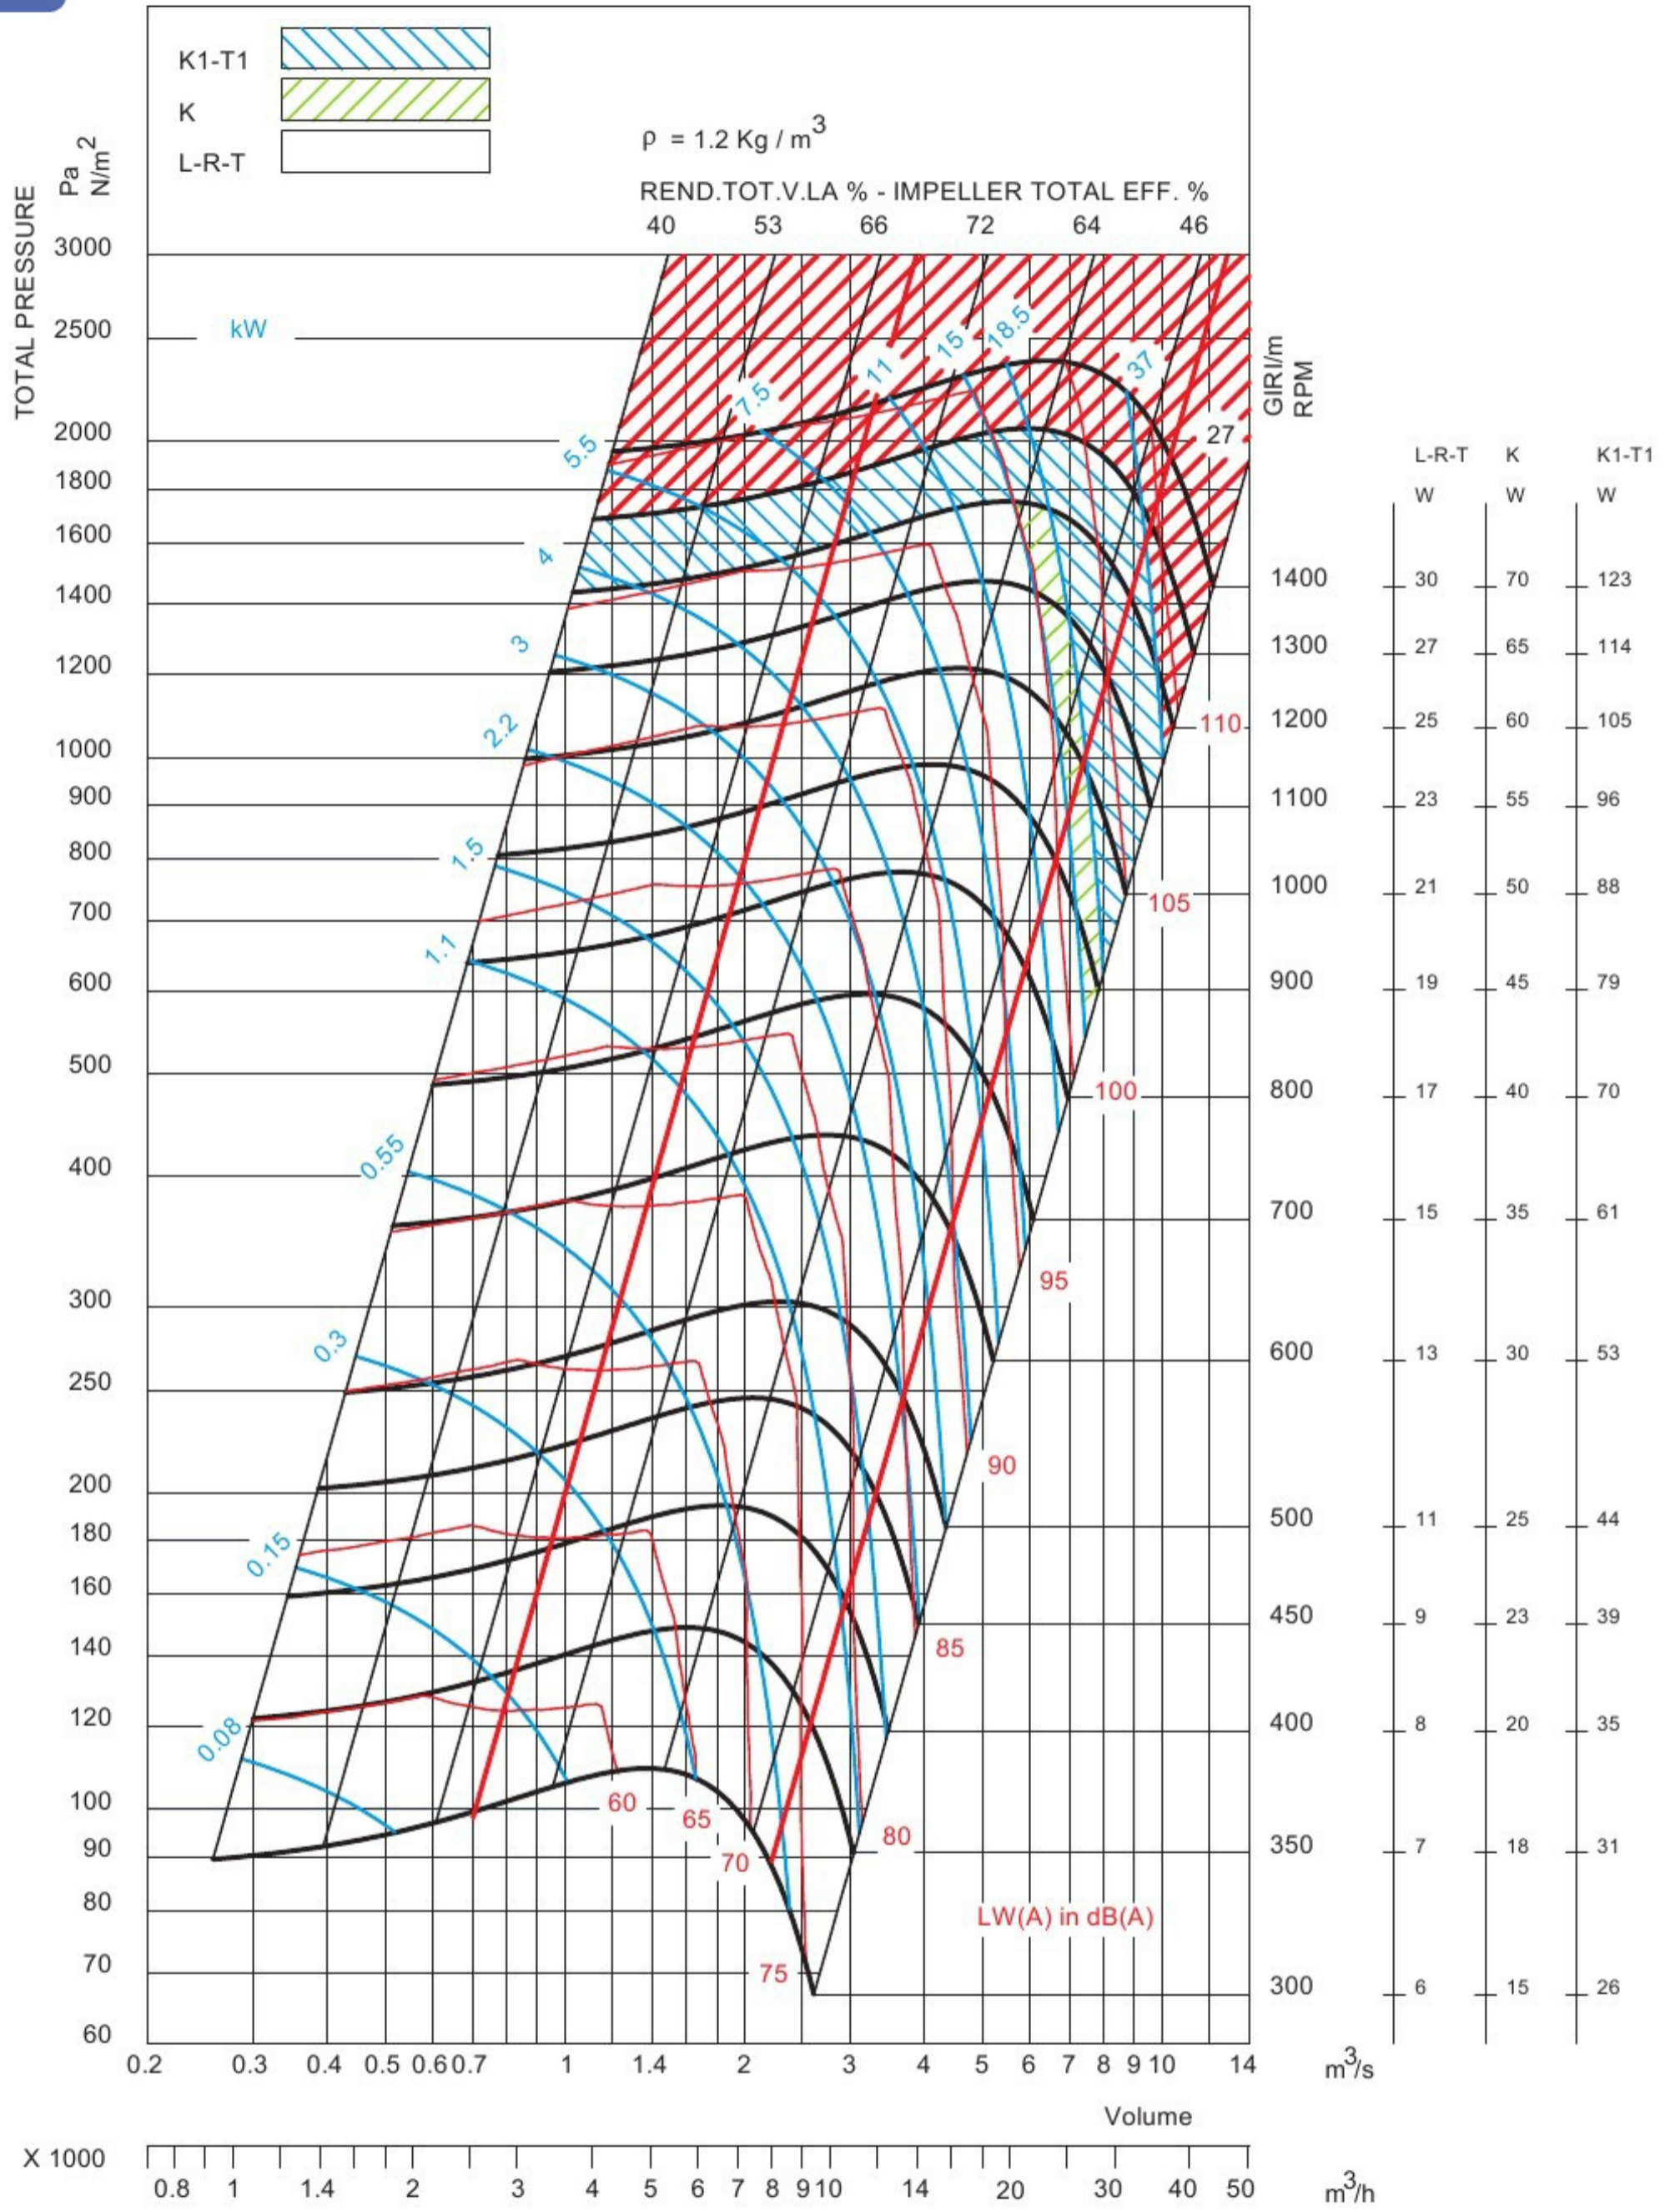




630 mm WHEEL DIAMETER

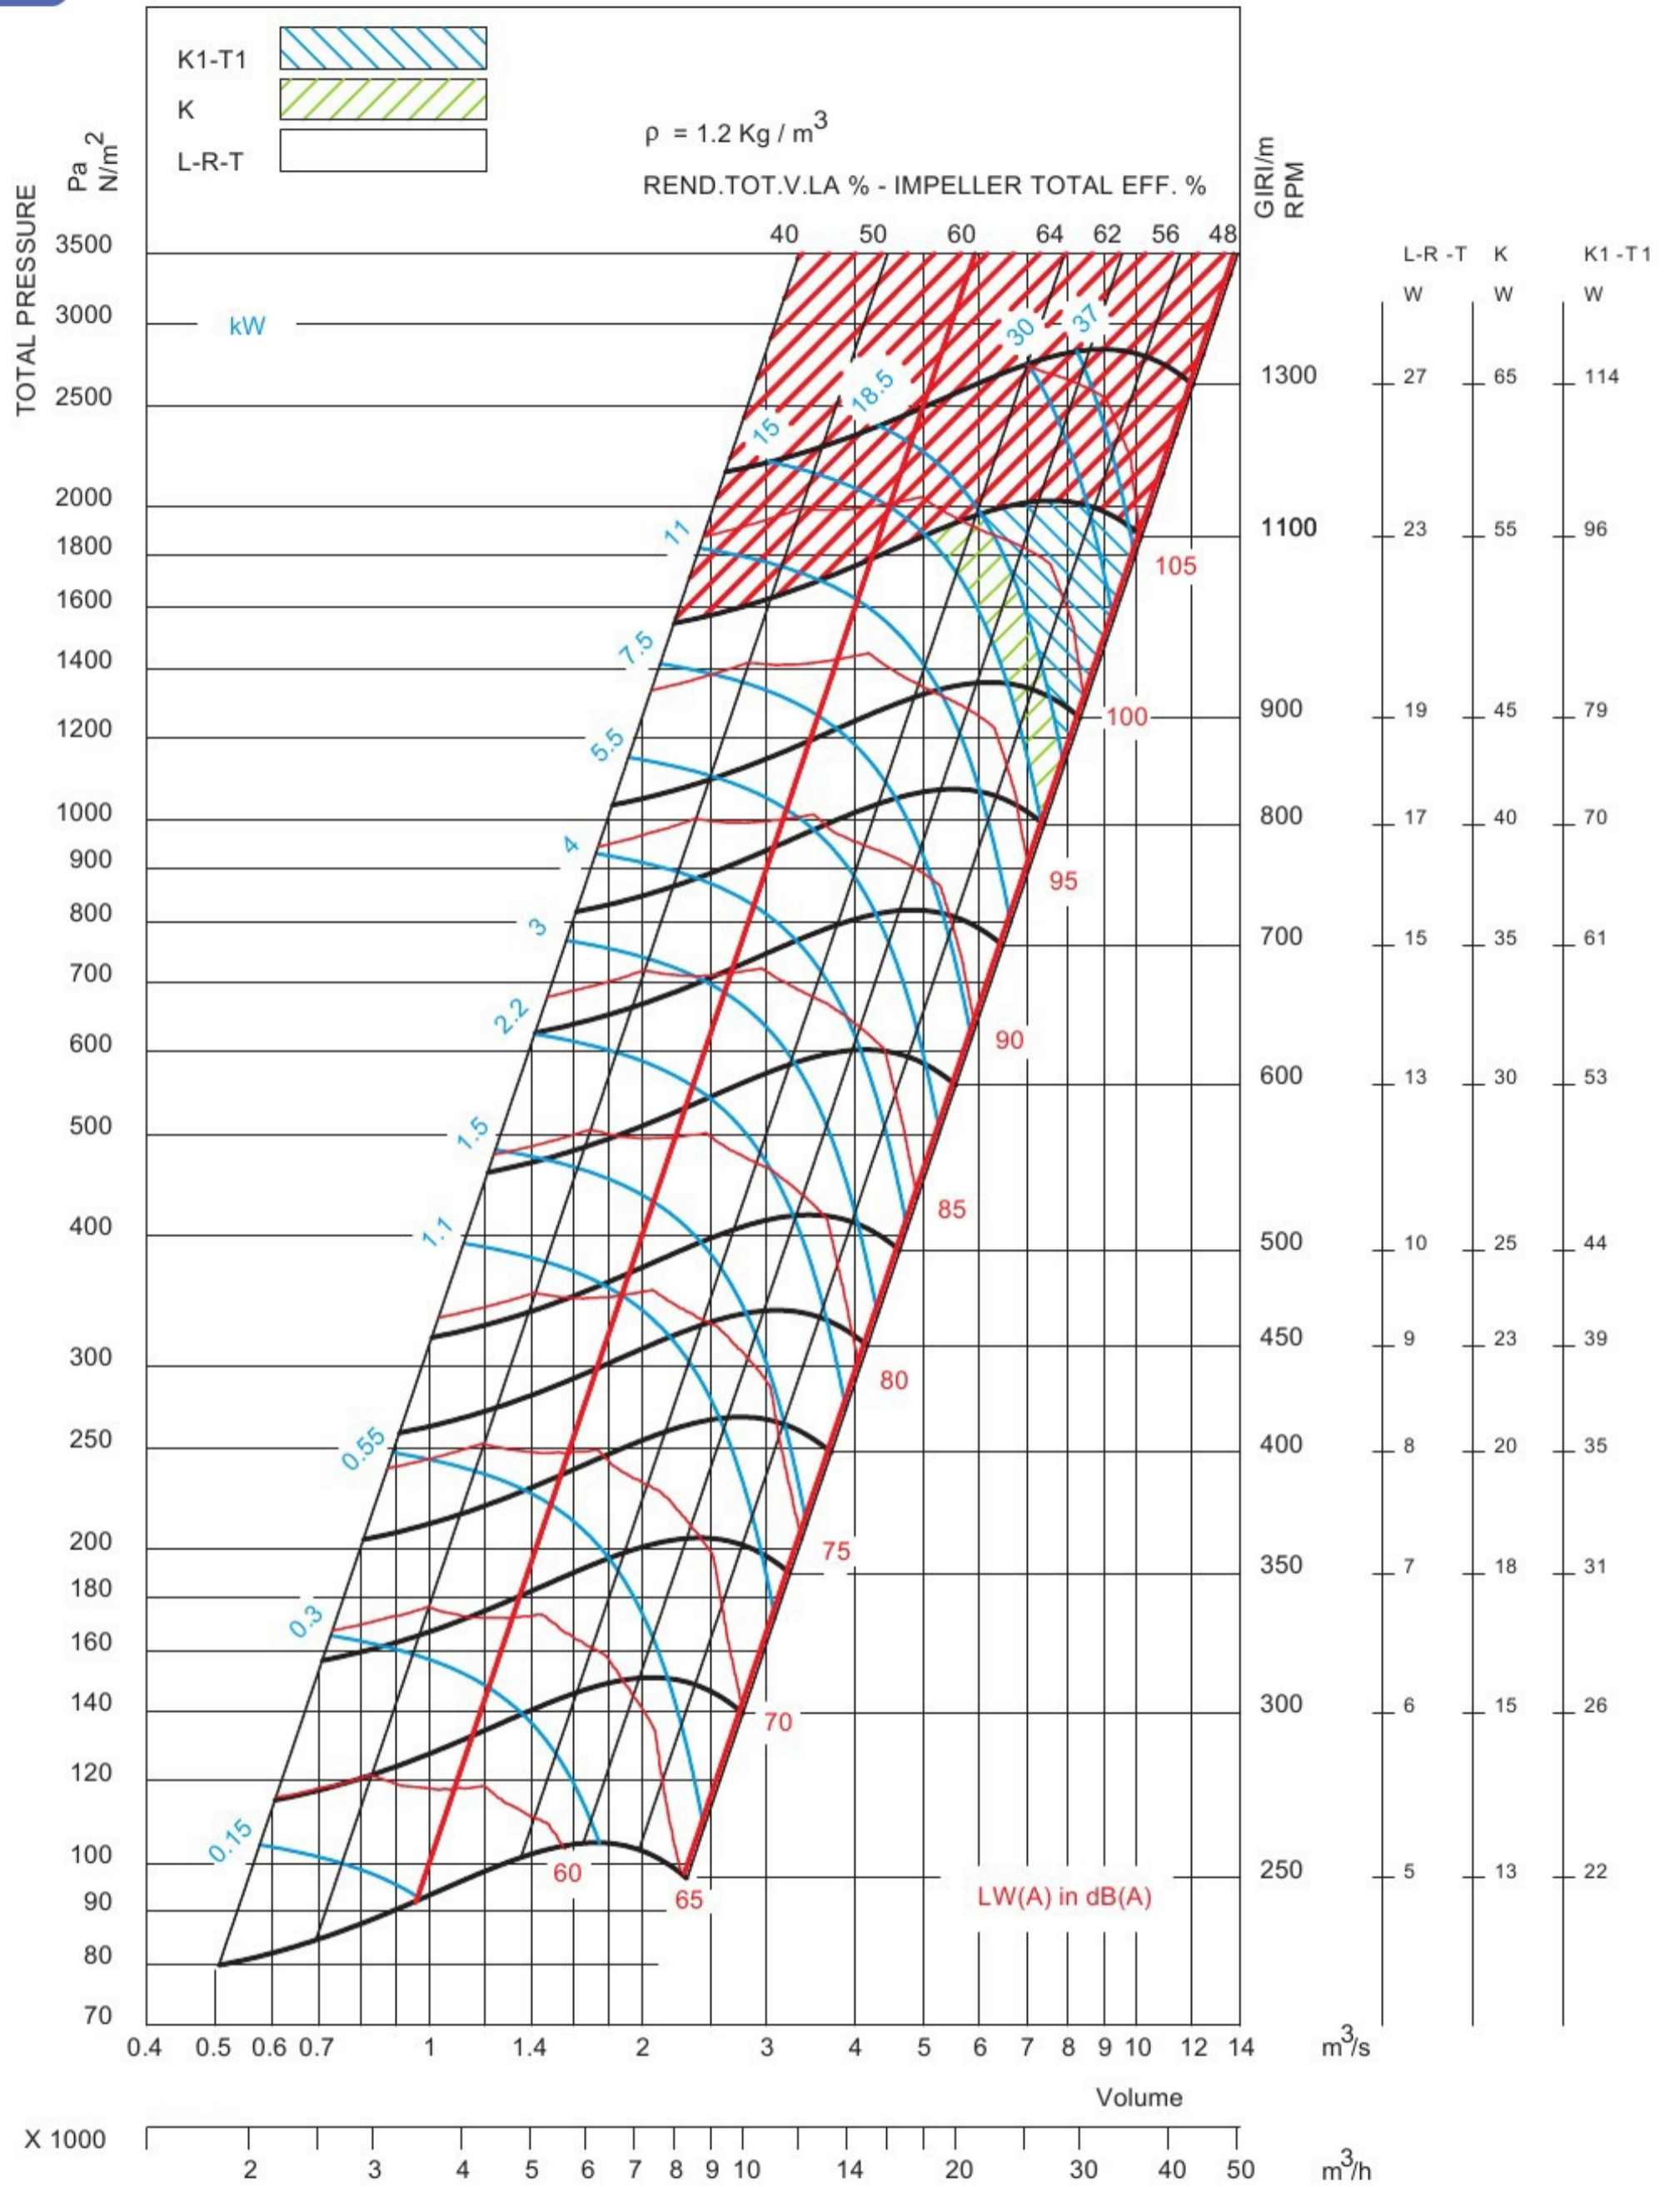




710 mm WHEEL DIAMETER

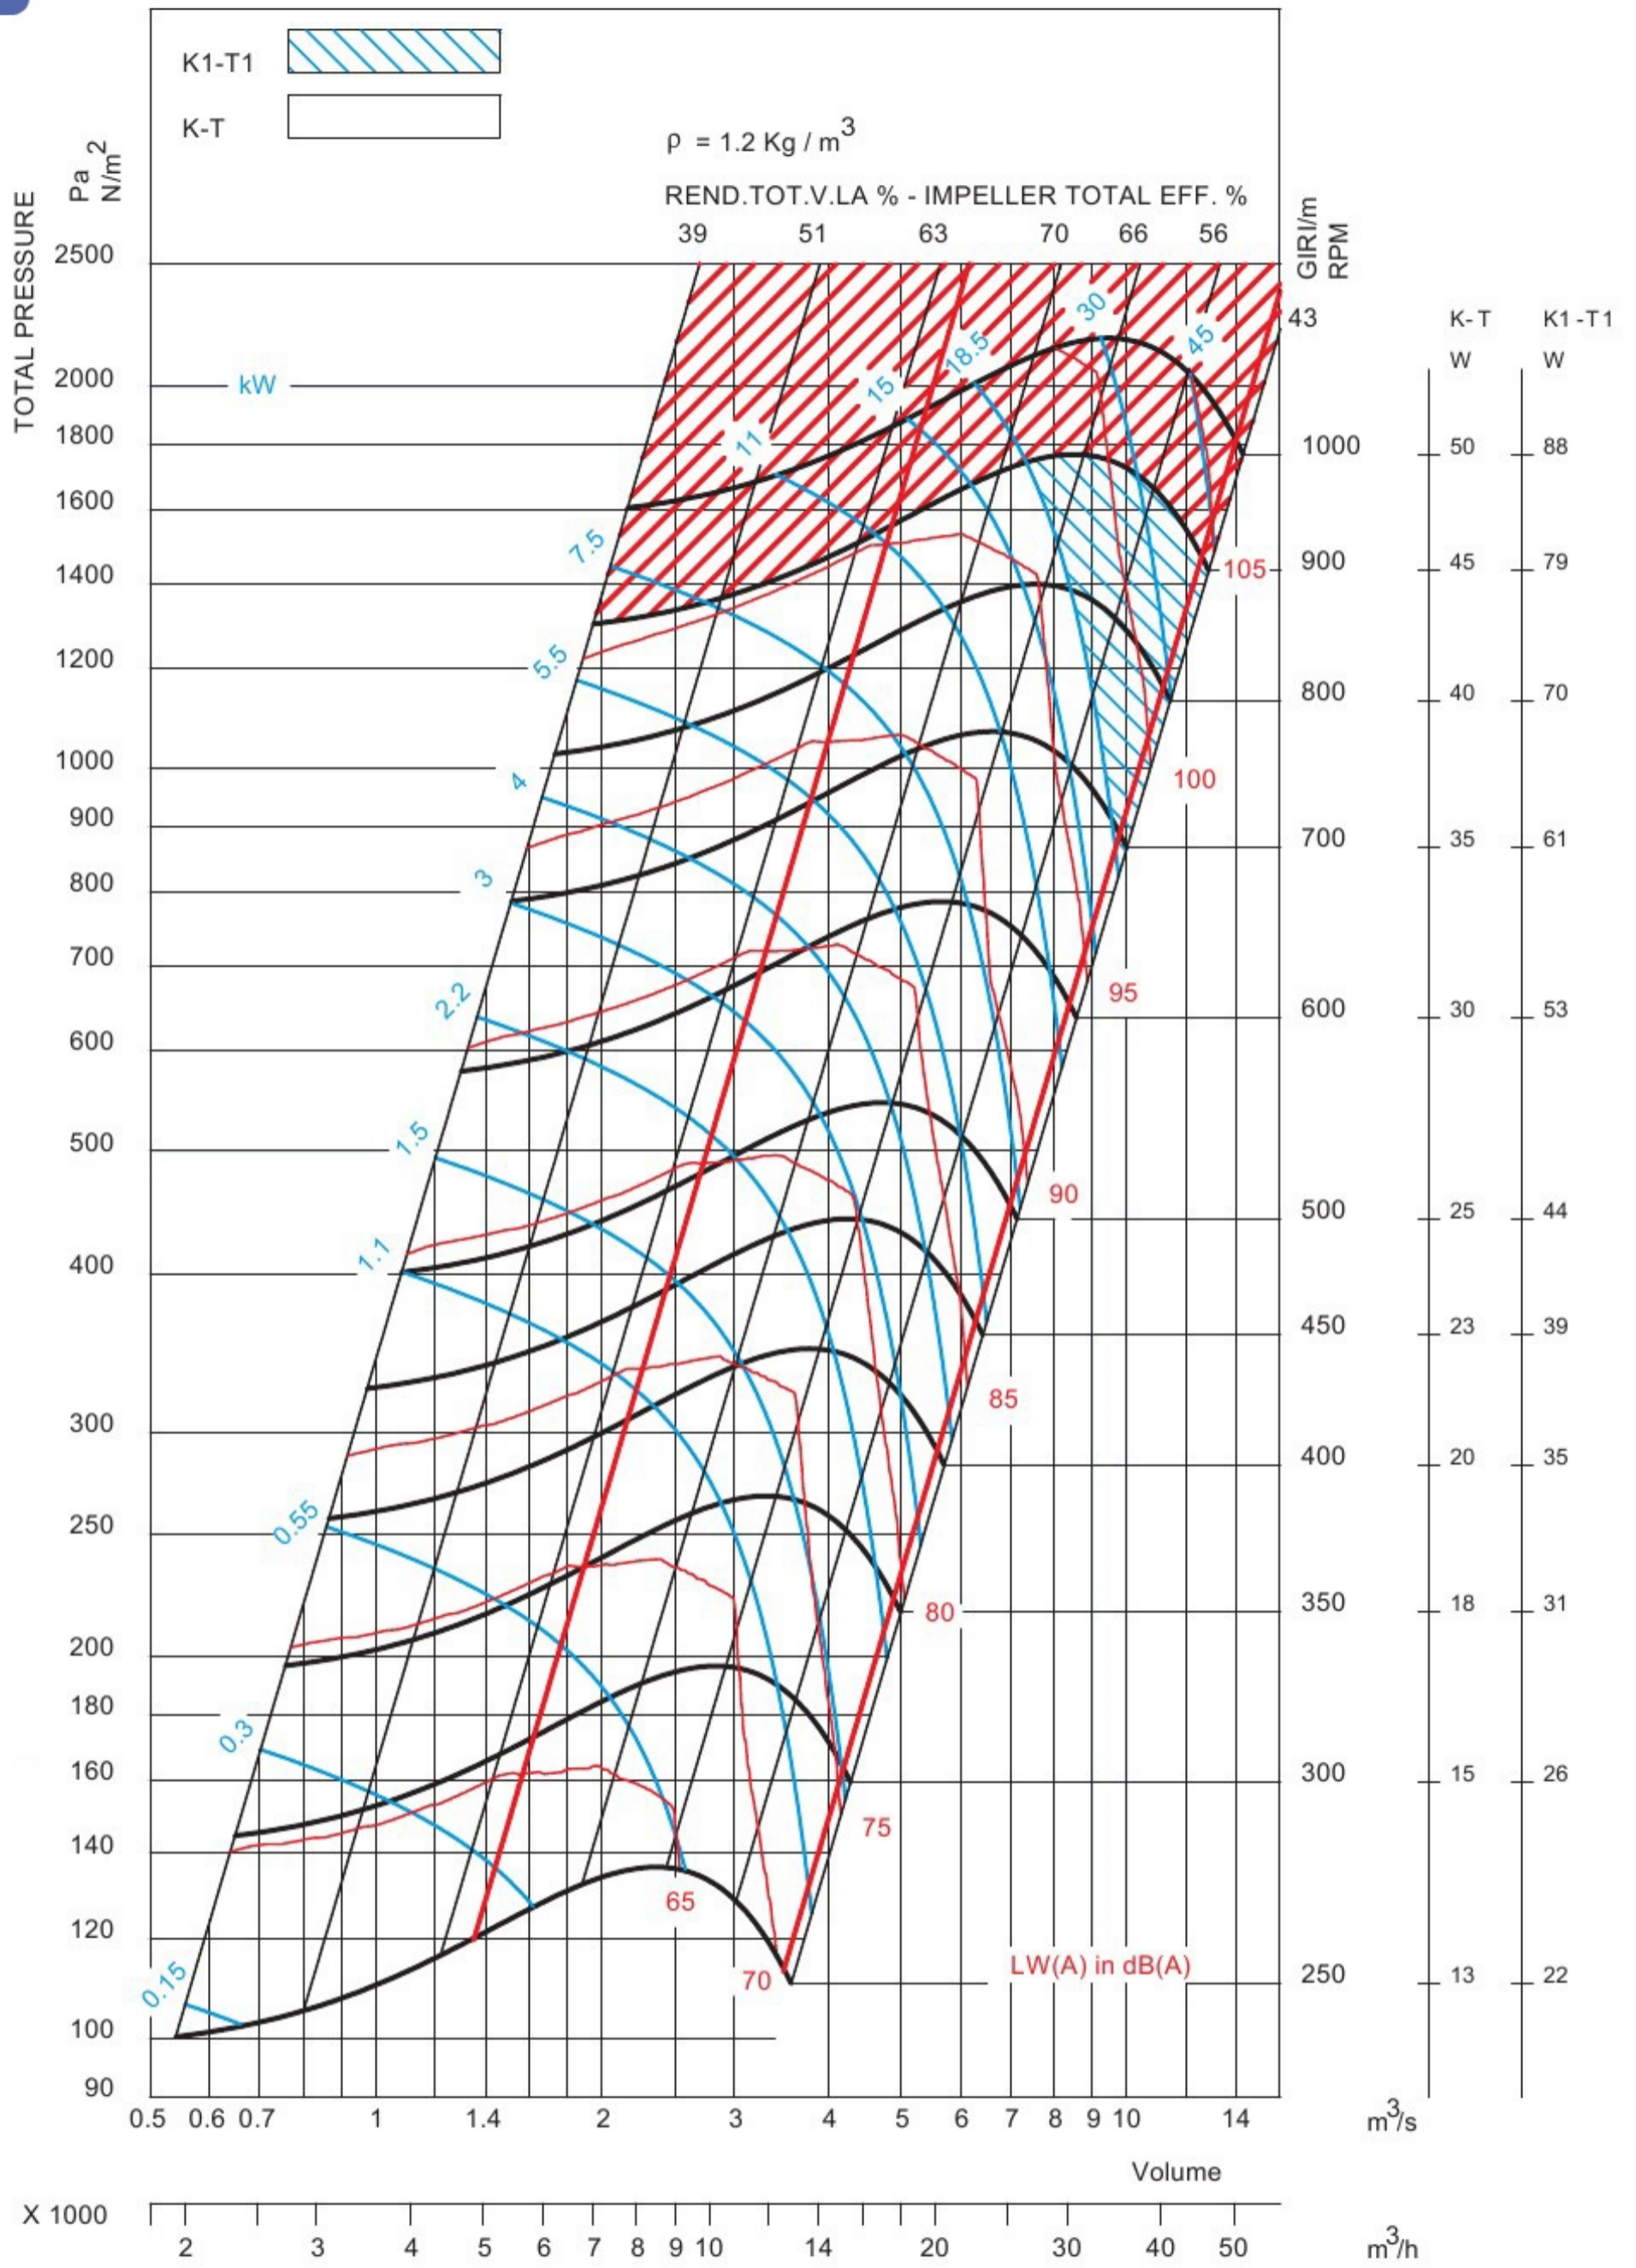


800 mm WHEEL DIAMETER

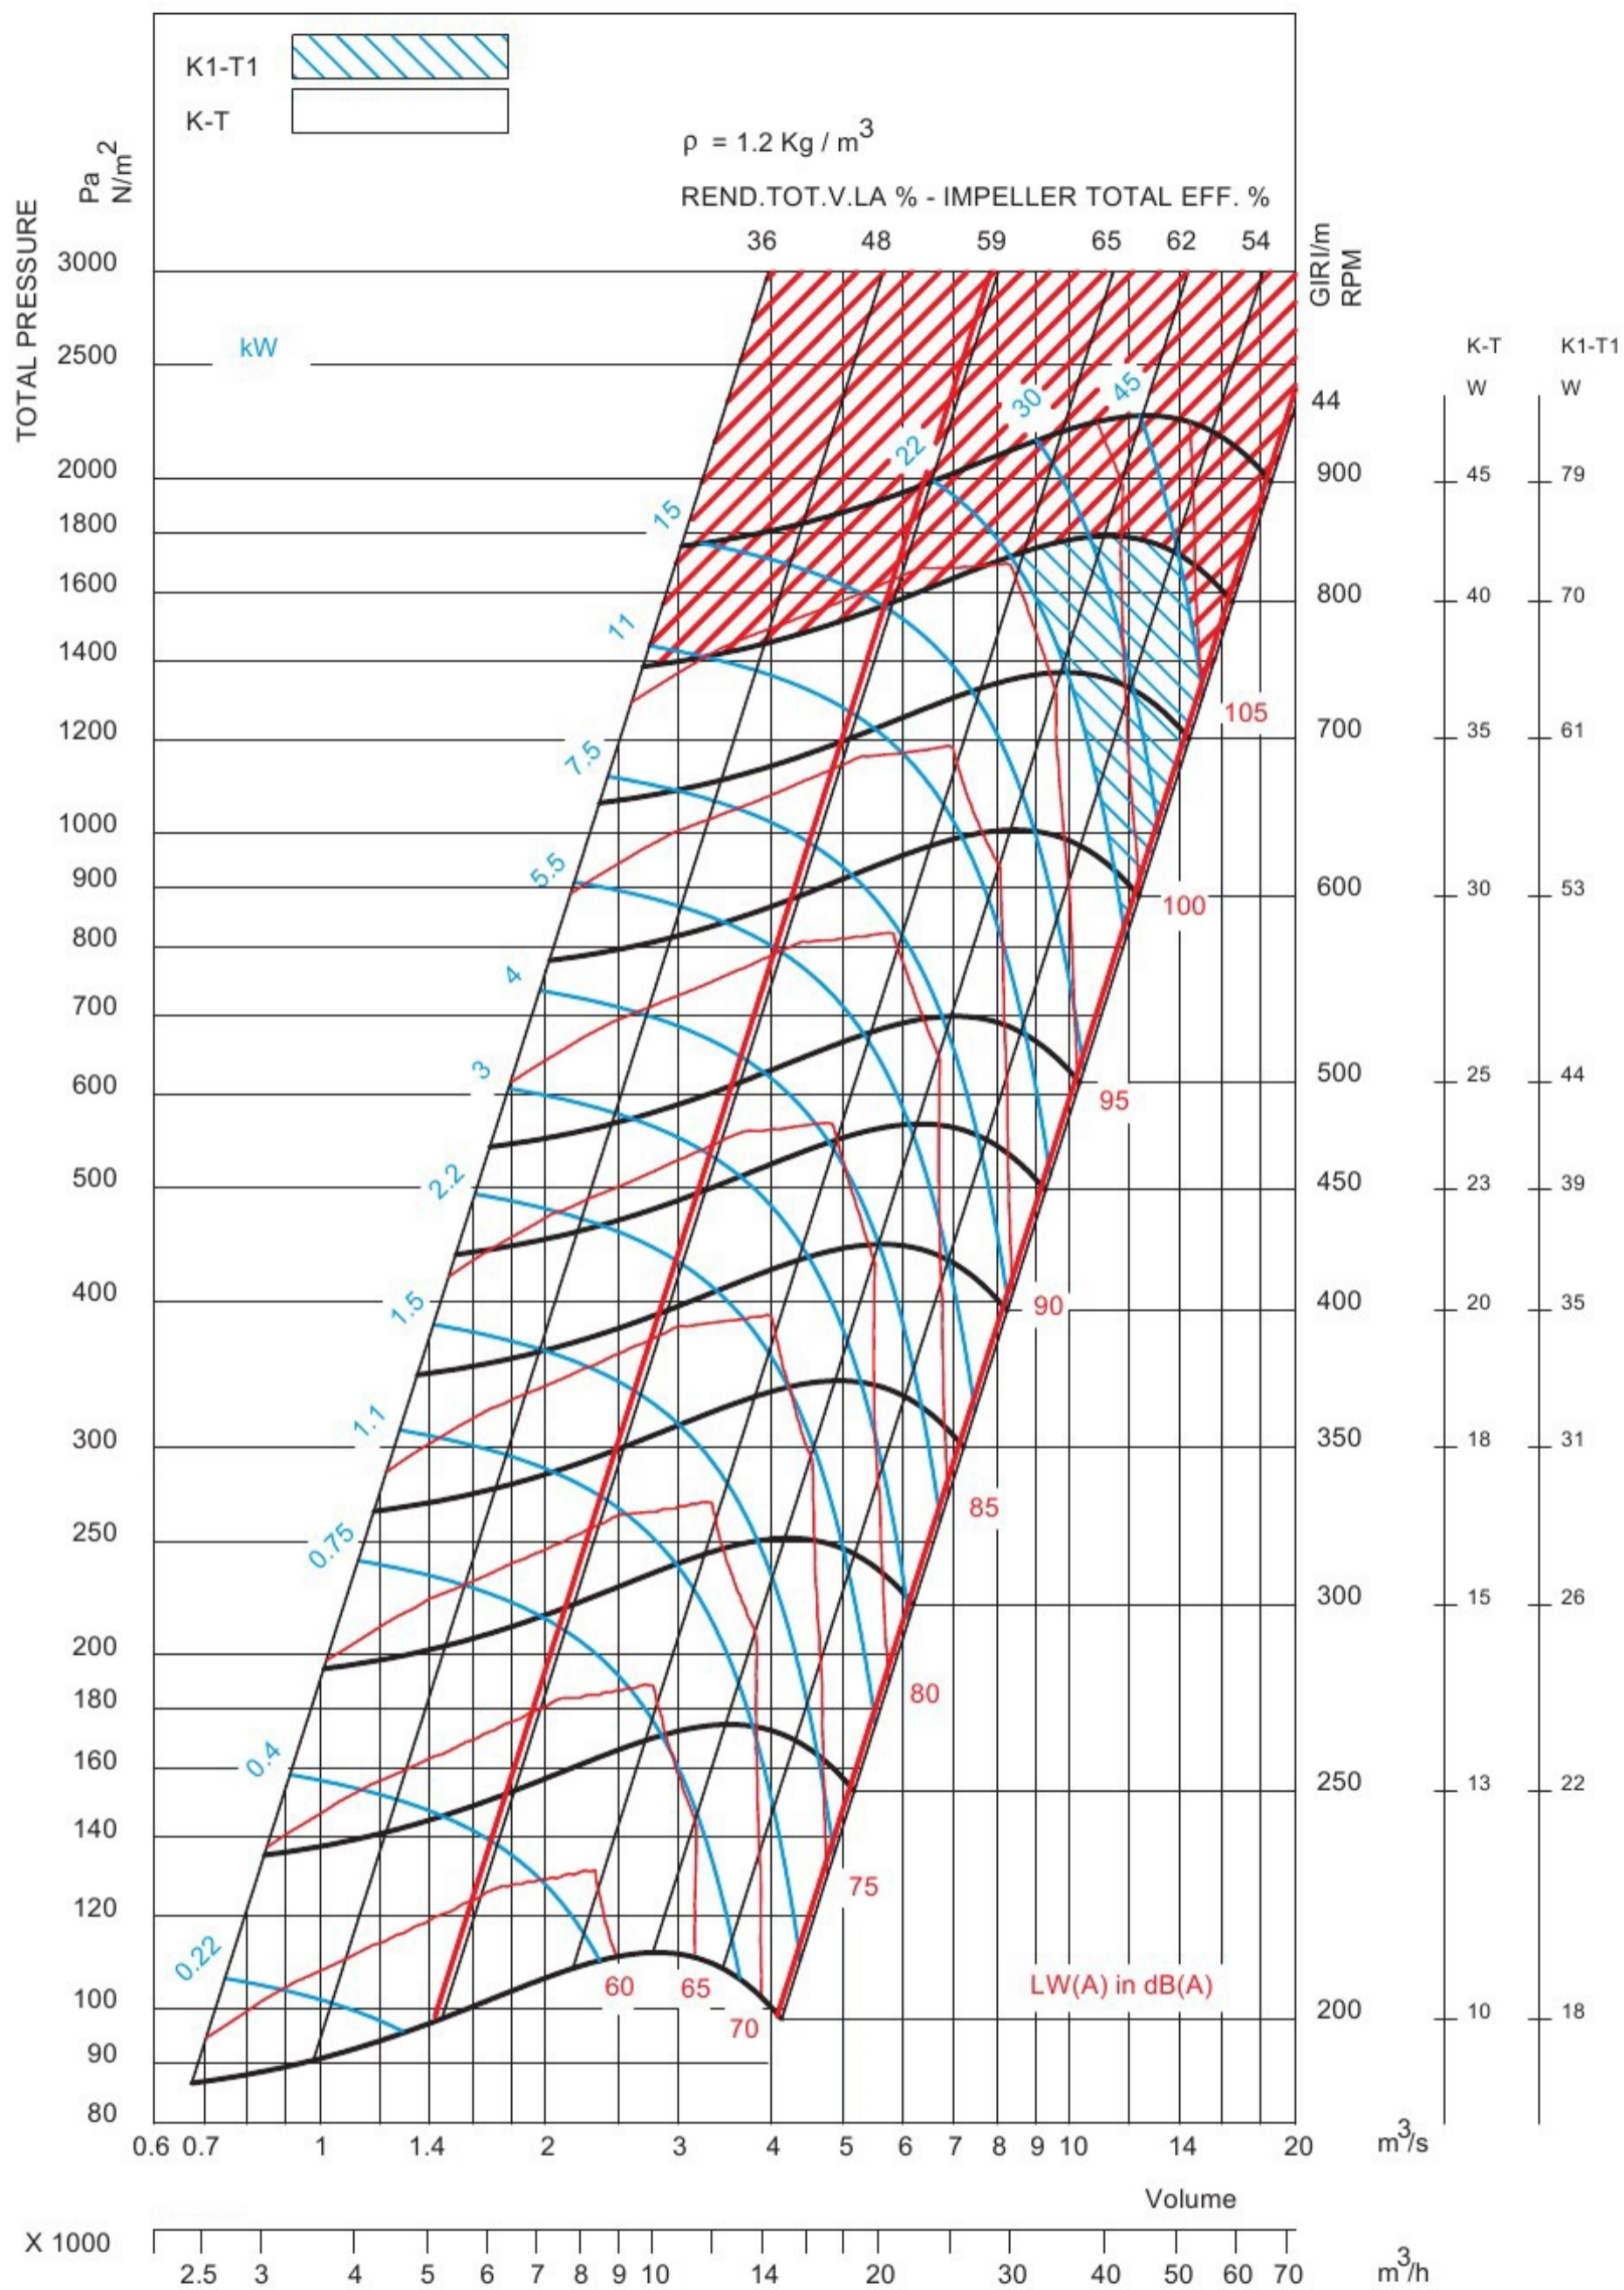



900 mm

WHEEL DIAMETER

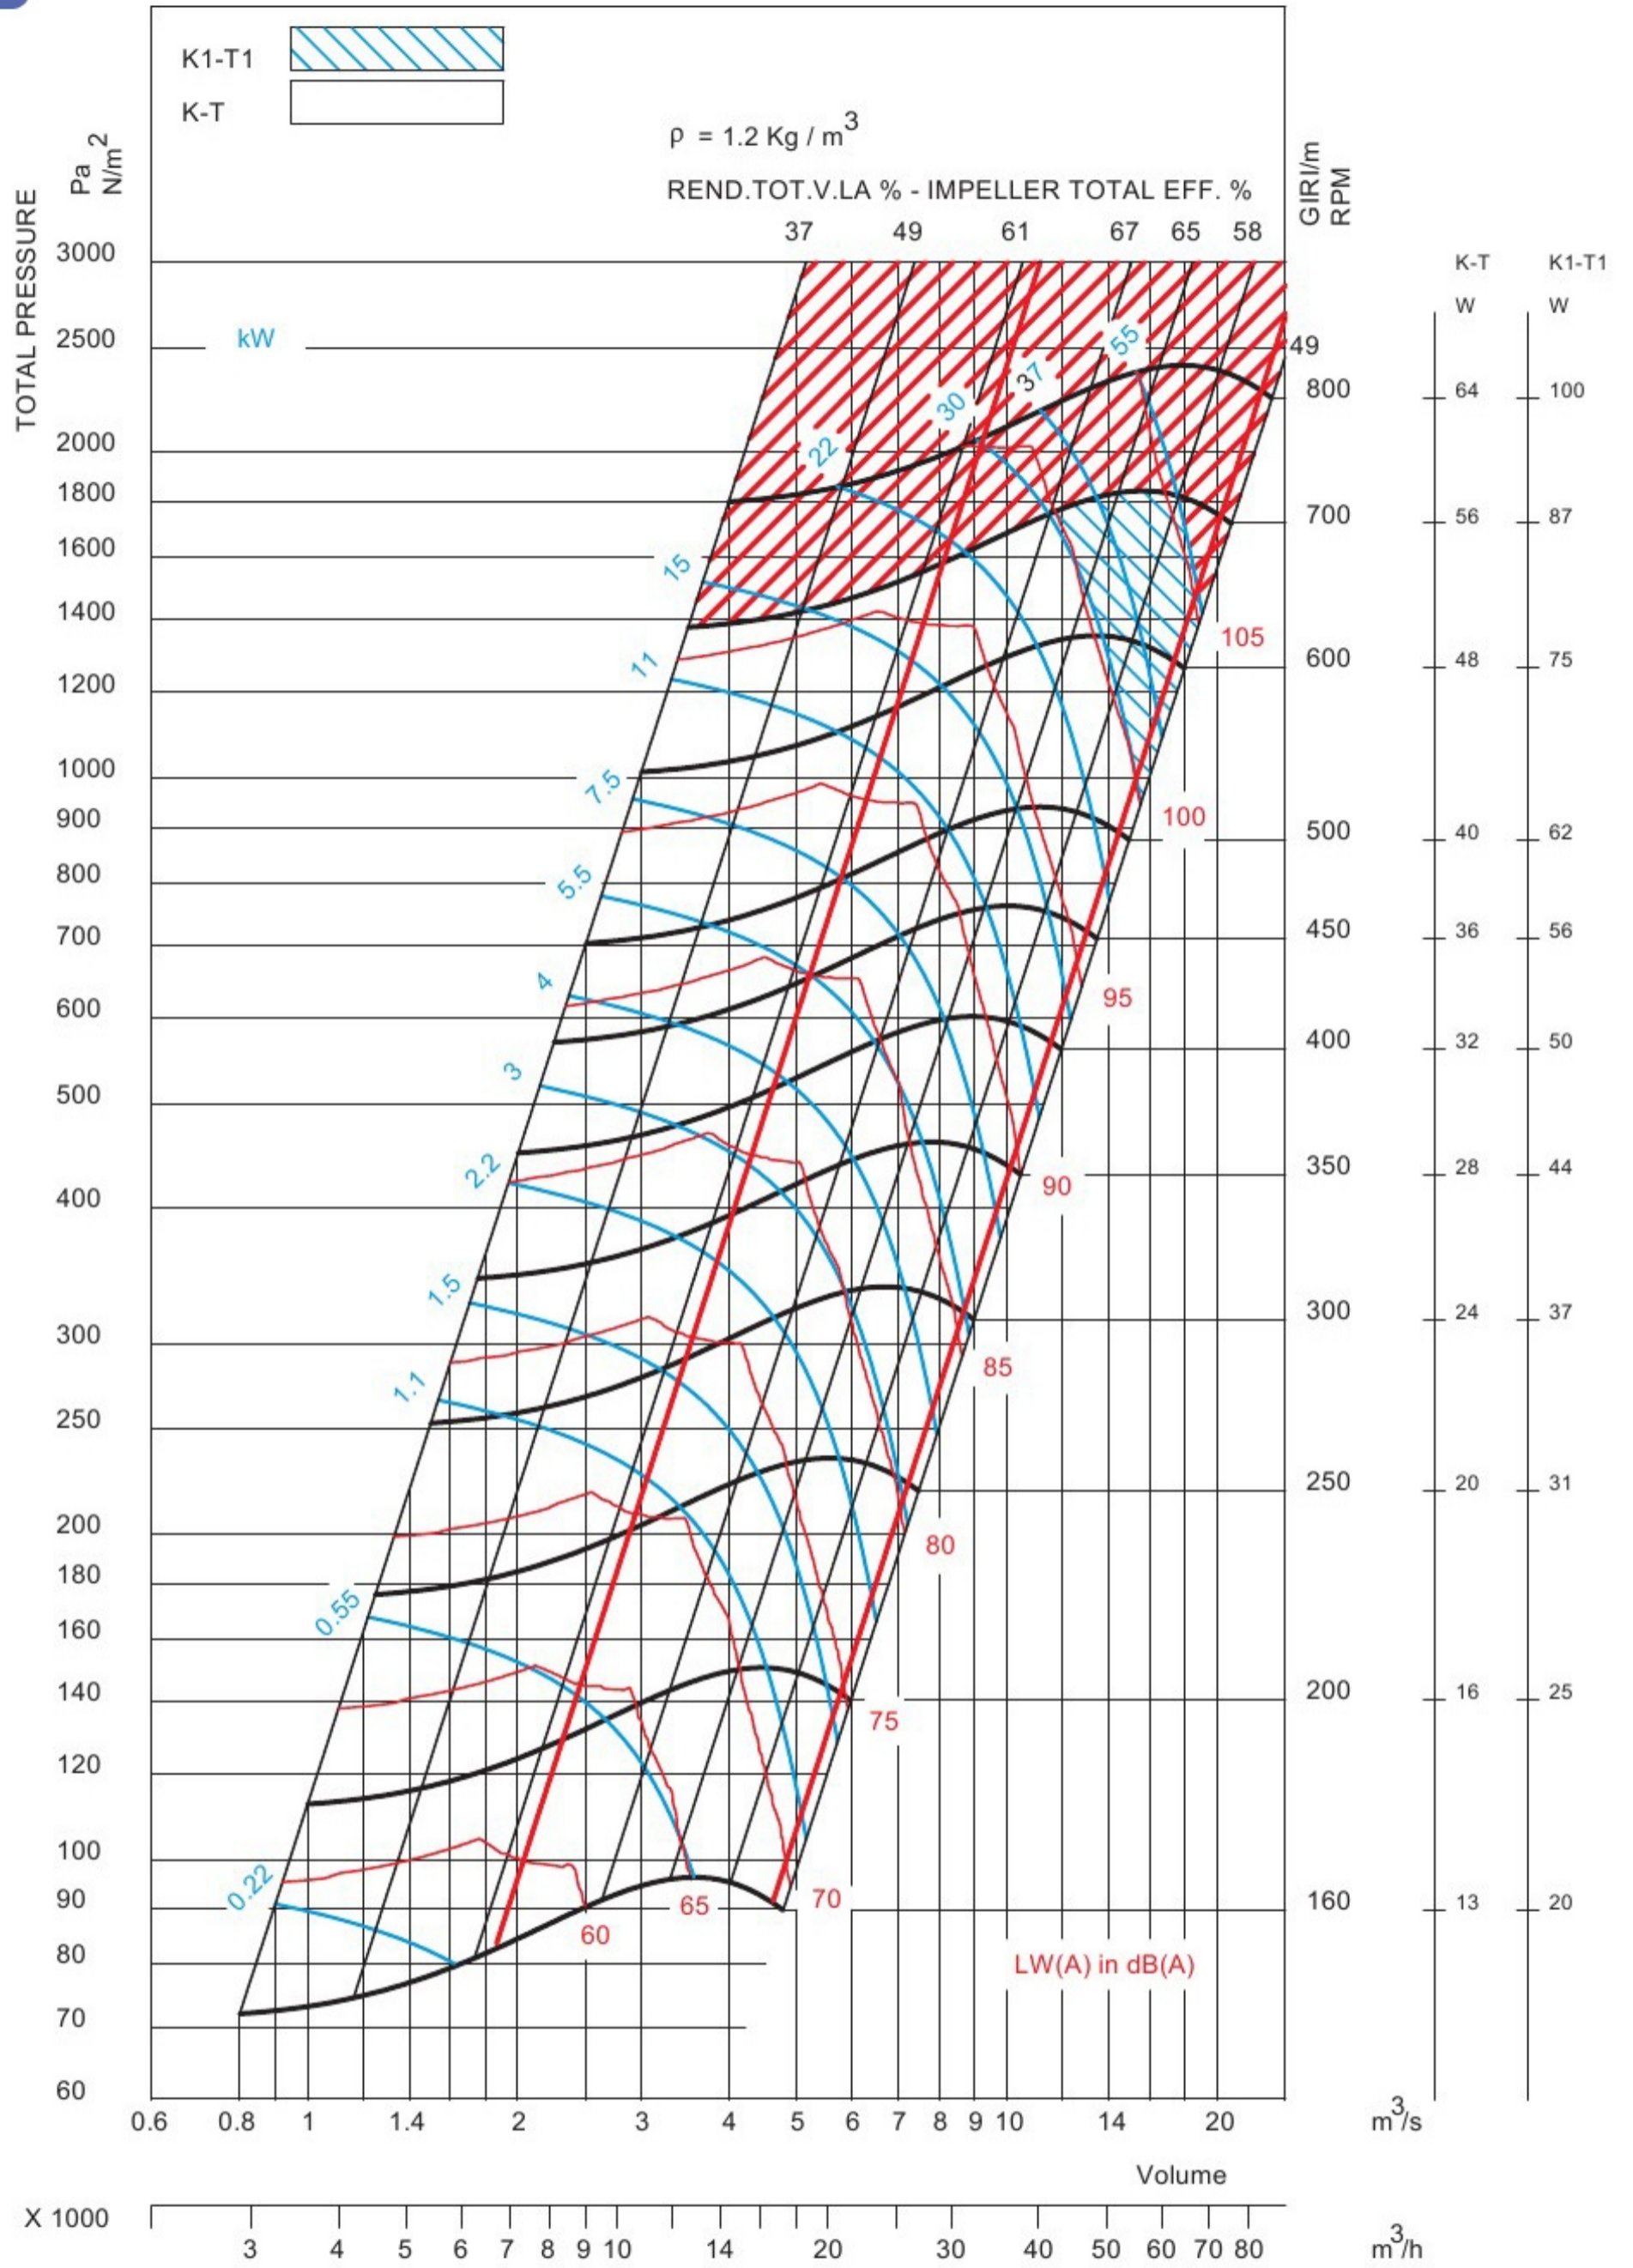

1000 mm WHEEL DIAMETER

